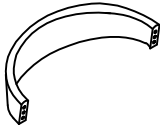 
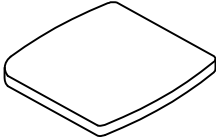 
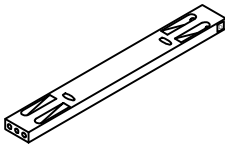 
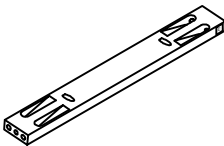 
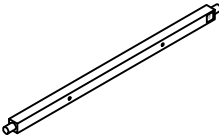 
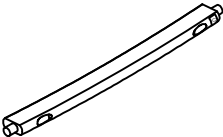 


Product Assembly Instructions

LCIESIWACH - ILEENA DINING CHAIR


PART LIST

 A : BACK REST x1	 B : CHAIR LEG x2	 C : CUSHION SEAT x1
 D : FRONT APRON x1	 E : BACK APRON x1	 F : CENTER STRETCHER x1
 G : FRONT STRETCHER x1		


HARDWARE LIST

 H : LONG JCBC BOLT M6 x 70MM x2	 I : SHORT JCBC BOLT M6 x 50MM x8	 J : SPRING WASHER 1/4" x10
 K : LONG PAN HEAD SCREW M5 x 32MM x8	 L : SHORT PAN HEAD SCREW M5 x 25MM x2	 M : LONG WOOD DOWEL DIA8 x 35MM x8
 N : SHORT WOOD DOWEL DIA8 x 25MM x2	 O : M4 ALLEN KEY x1	 P : WOOD BUTTON (DIA:14.5) x2

 
STEP 1

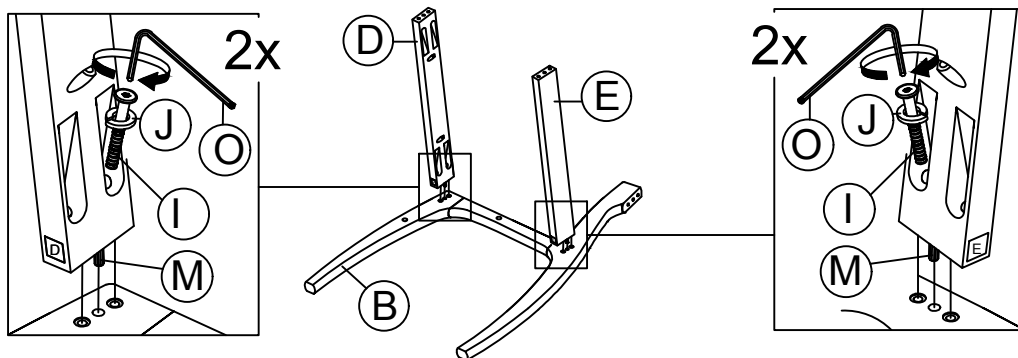

 
STEP 2

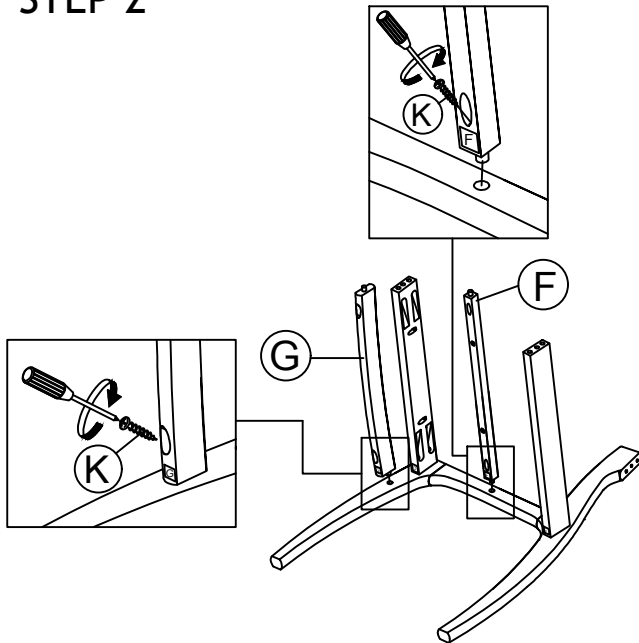

 
STEP 3

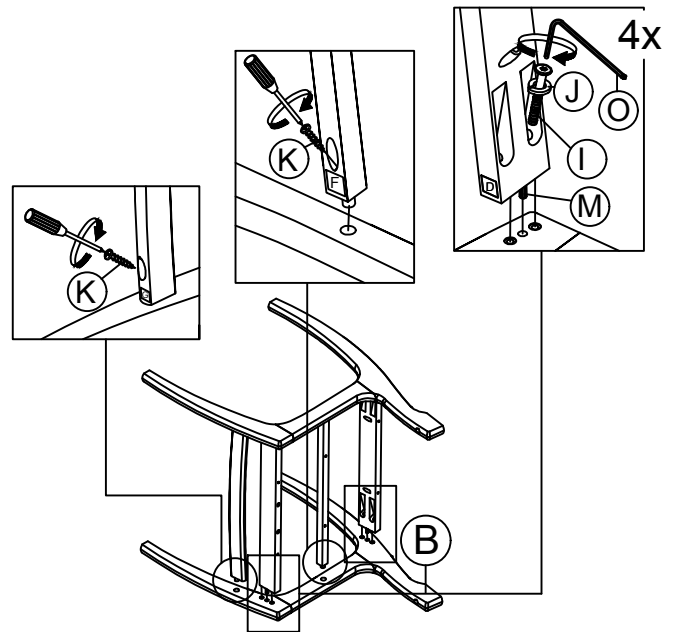

 
STEP 4

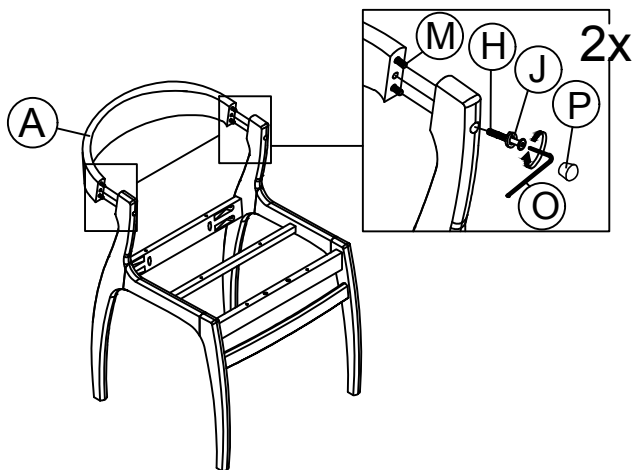

 STEP 5

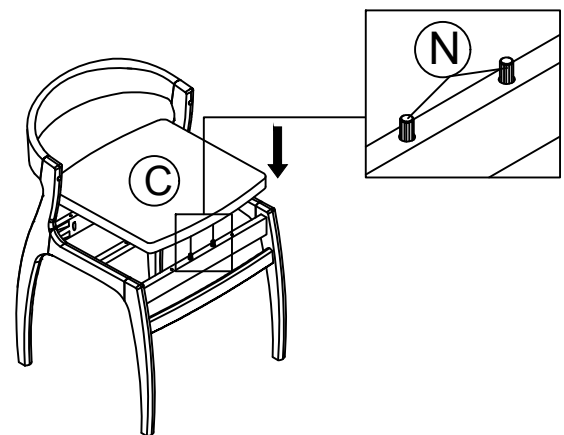

 STEP 6

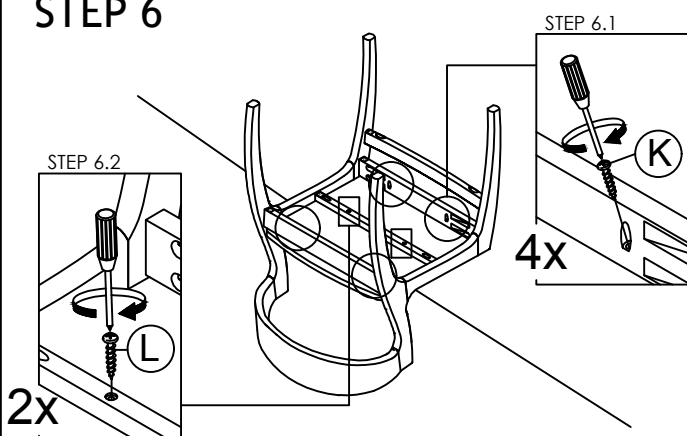

ASSEMBLY IS COMPLETE

