


Product Assembly Instructions

LCKSSIWACR - KLARRISA DINING CHAIR


PART LIST

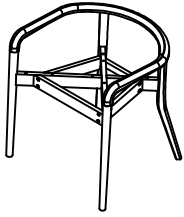

A : CHAIR FRAME x1



B : CUSHION BACK x1

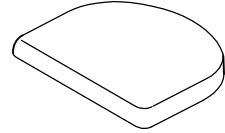

C : CUSHION SEAT x1

HARDWARE LIST



D : SHORT PAN HEAD SCREW M5 x 32MM x6



E : LONG PAN HEAD SCREW M4 x 35MM x2




F : LONG WOOD DOWEL DIA10 x 35MM x2





G : SHORT WOOD DOWEL DIA 8 x 25MM x2


STEP 1

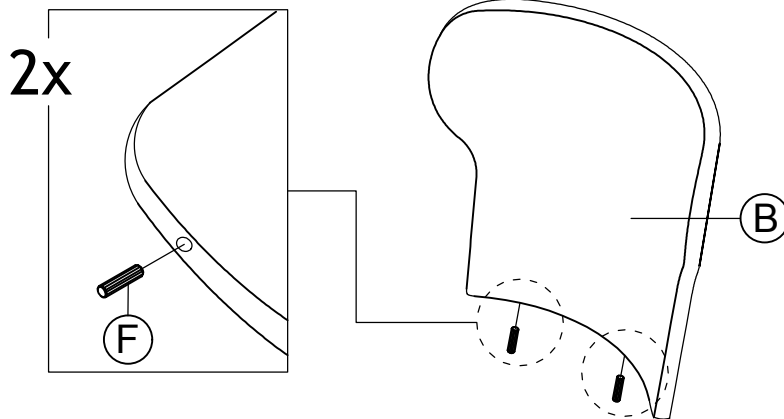


STEP 2

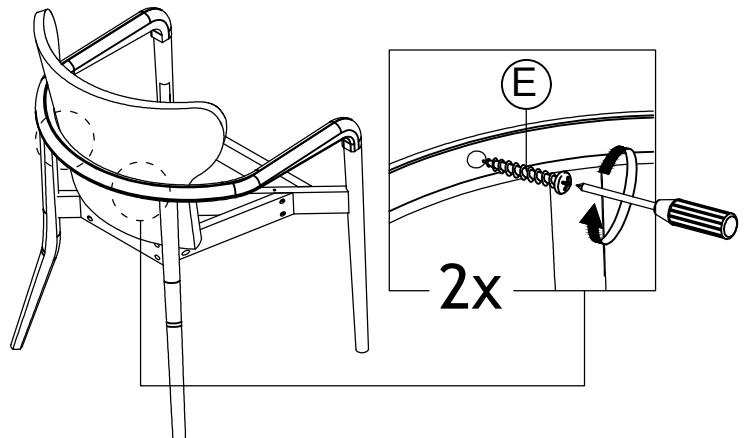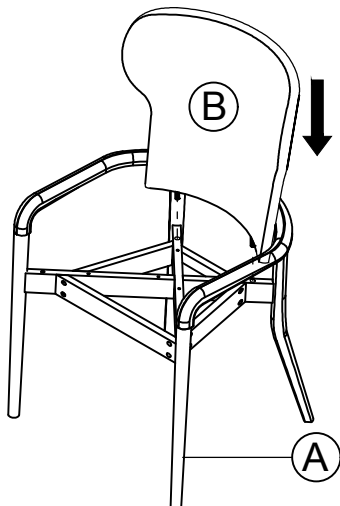


STEP 3

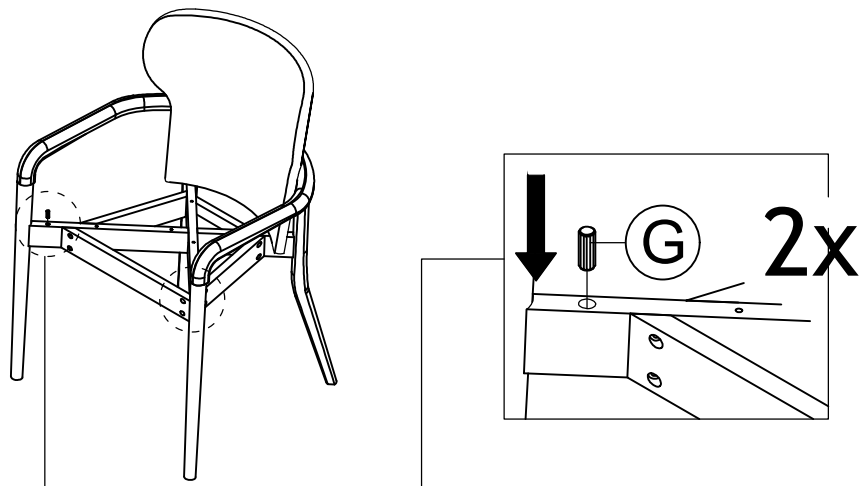

STEP 4

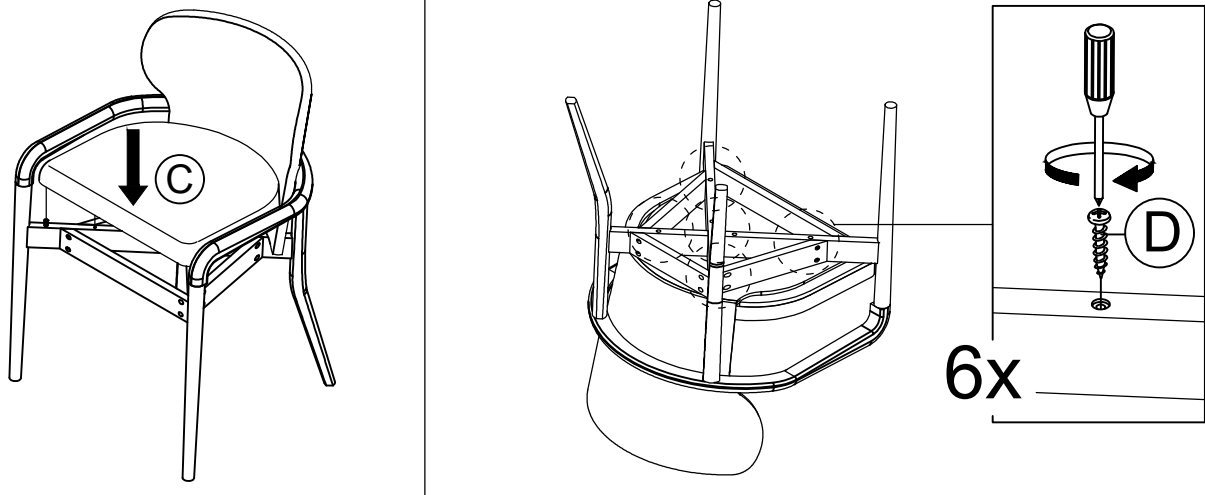

ASSEMBLY IS COMPLETE

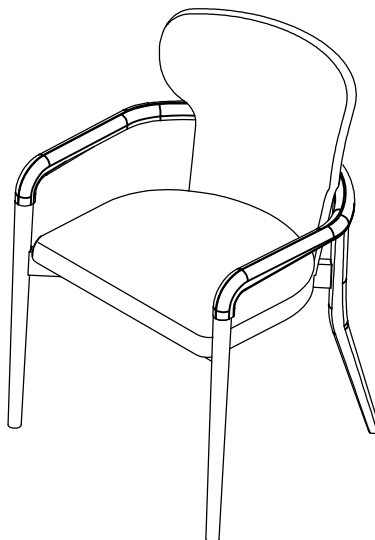




Product Assembly Instructions

LCKSDIWATOP / LCKSDIWABA - KLARISSA DINING TABLE

PART LIST

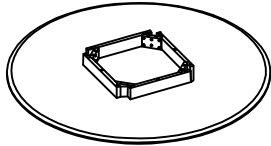

A : TABLE TOP x1



B : TABLE LEG x4

HARDWARE LIST



C : JCBB SCREW M8 x 70MM x8



D : SPRING WASHER 5/16" x8





E : FLAT WASHER 5/16" x8



F : M5 ALLEN KEY x1

STEP 1

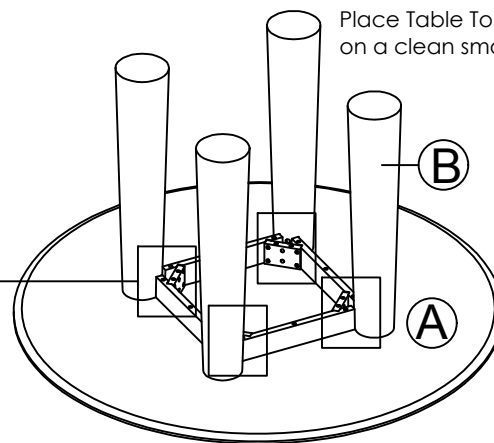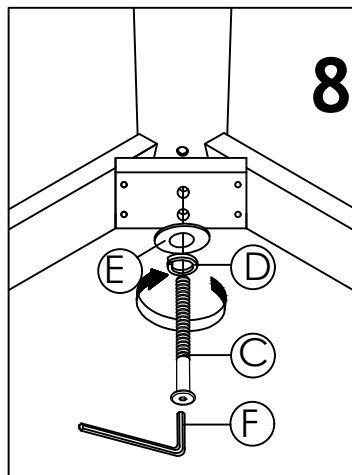

Place Table Top (A) face down, on a clean smooth surface.

ASSEMBLY IS COMPLETE

