


## Product Assembly Instructions Item#: SATURN Swivel Barstool

Helpers needed to assemble: 2
Estimate time frame to assemble: 20 minutes


•Step 1: Aligen the frame(2) onto the bottom of seat (1).

•Step 2: Put the bolts(A) through holes of frame and swivel.

Step 3: Put the washer ( C ) and nut (B) on the bottom of bolt as picture

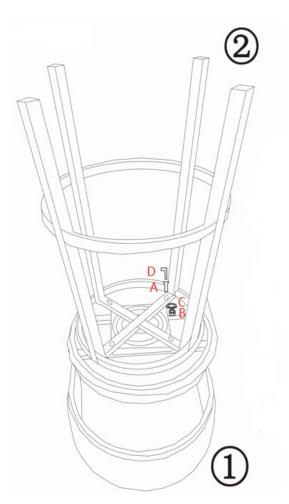

Step 4 Hold the nut not moving, and use allen key (D) to afix the bolt into nut until tighten.



Step 6: Sit and enjoy your new barstool.

#	Picture	Description	Quantity
1		Seat	1
2		Frame	1
А		Bolts(M6x25)	4
В		Nut	4
С		Washer	4
D		Allen Key	1

