

Product Assembly Instructions

Item: Channell Corner Unit

Helpers needed to assemble: 2


Estimated time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the **HARDWARE LIST** below.


Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

Retain the Allen key for regular maintenance. We recommend end tightening all screws every three months to ensure continued stability and performance.


PART LIST

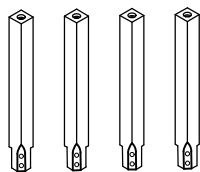


A : LEG x4

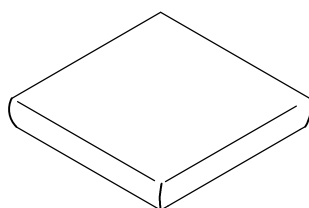

B : CUSHION SEAT x1

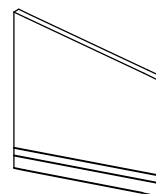

C : BACKREST WITH ZIP x1

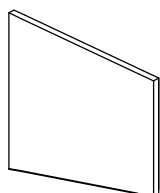

D : BACKREST x1


HARDWARE LIST



E : JCBC BOLT M6 x 70MM x3



F : JCBC BOLT M6 x 40MM x16



G : JCBC BOLT M6 x 30MM x8



H : SPRING WASHER x19



I : FLAT WASHER x19



J : M4 ALLEN KEY x1



K : METAL BRACKET WITH SPACER x2




L : METAL BRACKET x2

STEP 1

IMPORTANT NOTE: Do not fully tighten bolts from this step.


-Unzip the zipper on the Backrest (C) as shown in the diagram. Align the holes on Backrest (D). Insert 3 Bolts (E) together with Spring Washers (H) and Flat Washers (I). Loosely tighten with Allen key provided.

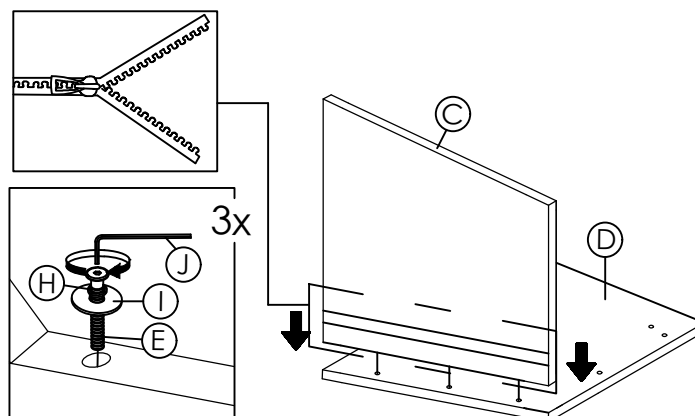

STEP 2

Attach Cushion Seat (B) to the Backrest (C) and (D) using 8 Bolts (F), Spring Washers (H) and Flat Washers (I).


Tighten all bolts securely, including from Step 1.

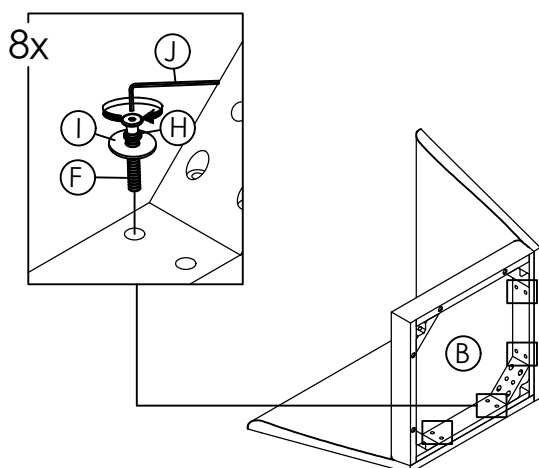

STEP 3


Insert the Legs (A) into the corners of the Cushion Seat (B).

Secure each leg using 8 Bolts (F) together with Spring Washers (H) and Flat Washers (I). Tighten all bolts securely.

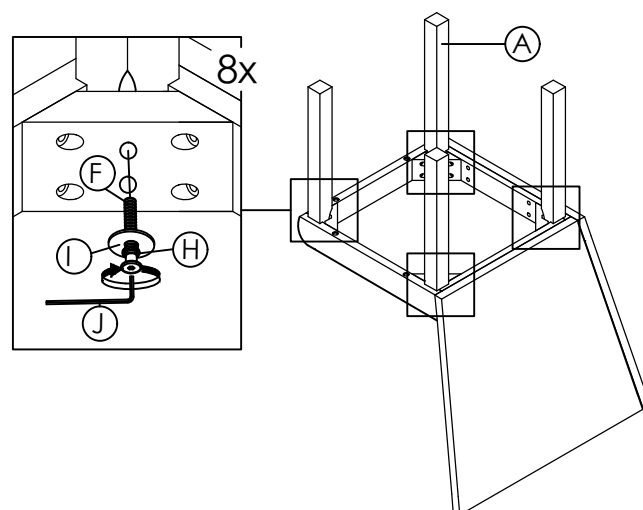


STEP 4

Attach the Metal Bracket with Spacer (K) to the holes located at front leg. Use 2 Bolts (G) and tighten all bolts securely.

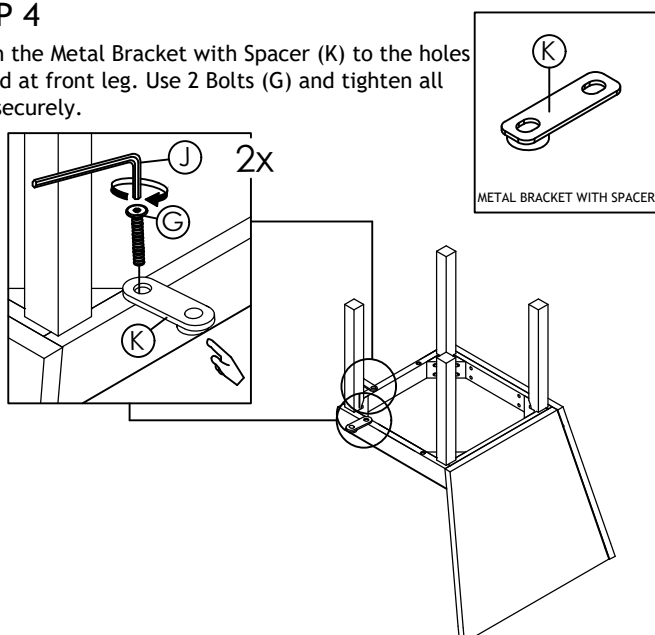

STEP 5


Attach the Metal Bracket (L) to the side leg. Use 2 Bolts (G) and tighten all bolts securely.

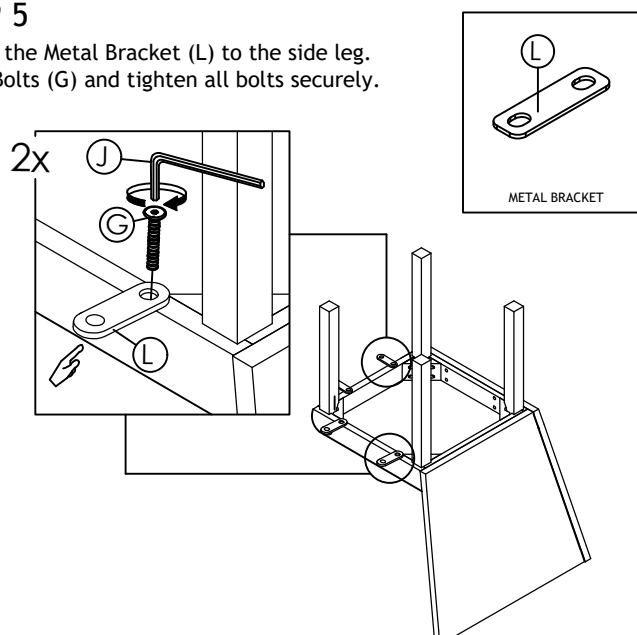

Bench to Corner Unit Assembly


Step 1

Align the metal brackets to the underside of the seat bench, using 2 Bolts (G). Tighten all bolts securely.

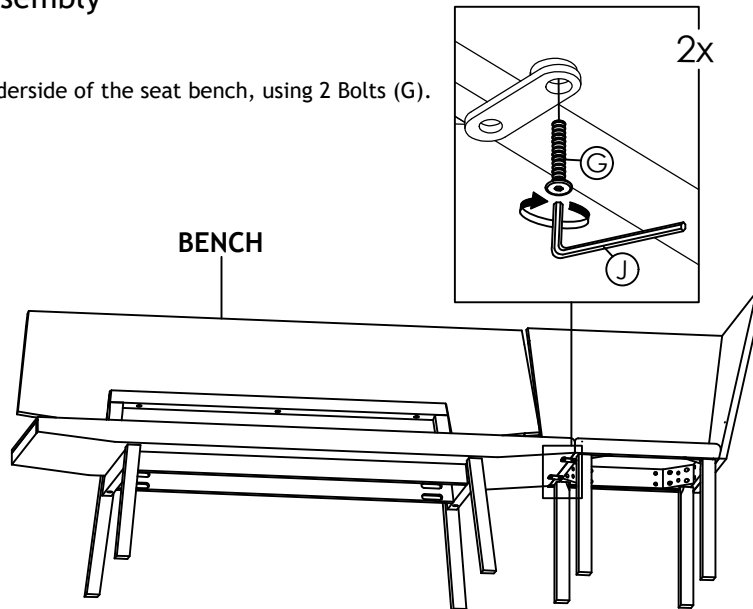

STEP 2

Attach the other bench to the opposite side of the corner unit using 2 Bolts (G). Tighten all bolts securely.

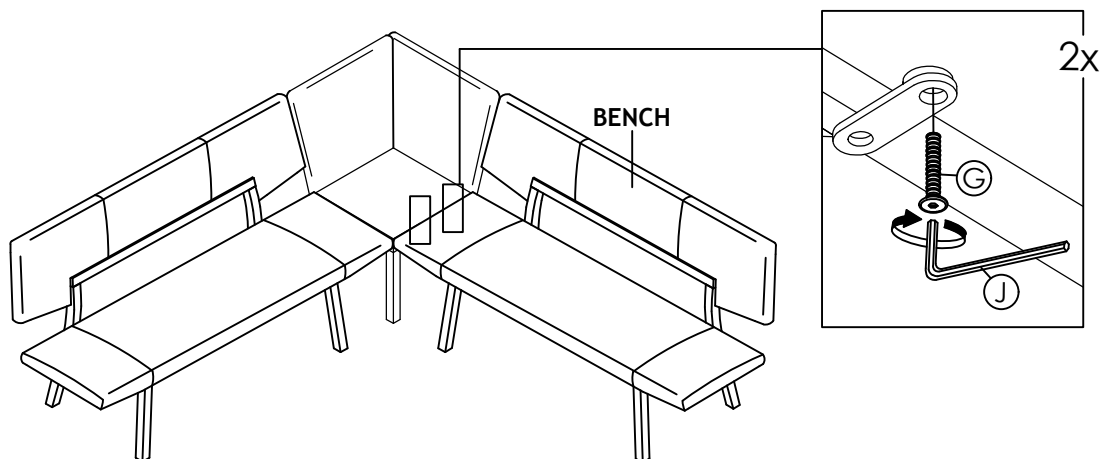

Your assembly is now complete

