



Product Assembly Instructions

Item: Channell Bench

Helpers needed to assemble: 2





Estimated time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the **HARDWARE LIST** below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

Retain the Allen key for regular maintenance. We recommend end tightening all screws every three months to ensure continued stability and performance.

PART LIST

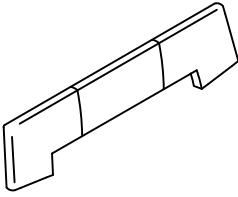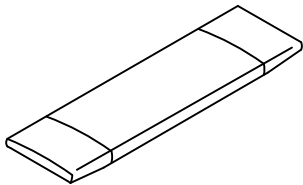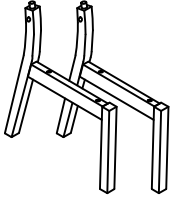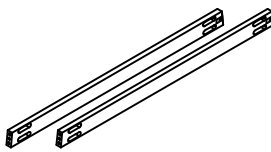
 A : BACKREST x1	 B : SEAT CUSHION x1	 C : LEG (Left & Right labeled) x2
 D : BACKREST SUPPORT RAIL x1	 E : SEAT SUPPORT RAIL x2	

HARDWARE LIST

 F : JCBC BOLT M6 x 45mm x5	 G : JCBC BOLT M6 x 50mm x8	 H : JCBC BOLT M6 x 70mm x4
 I : JCBC (W) SCREW M7 x 50mm x2	 J : SPRING WASHER 1/4" x17	 K : WOOD BUTTON x2
 L : M4 ALLEN KEY x1	 M : LARGE WOOD DOWEL x4	 N : SMALL WOOD DOWEL x4

STEP 1


Insert the 4 small wood dowels (N) into the middle holes of the Seat Support Rail (E), as shown.

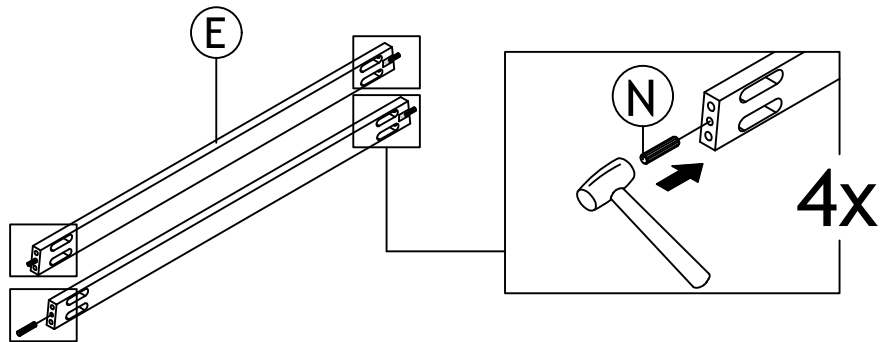

STEP 2


Attach the Seat Support Rail (E) to the Left and Right Legs (C) as labelled.

Ensure the arrow on the support rail is facing downward. Insert 8 Bolts (G) with Spring Washers (J), then tighten all bolts securely using the Allen Key (L).

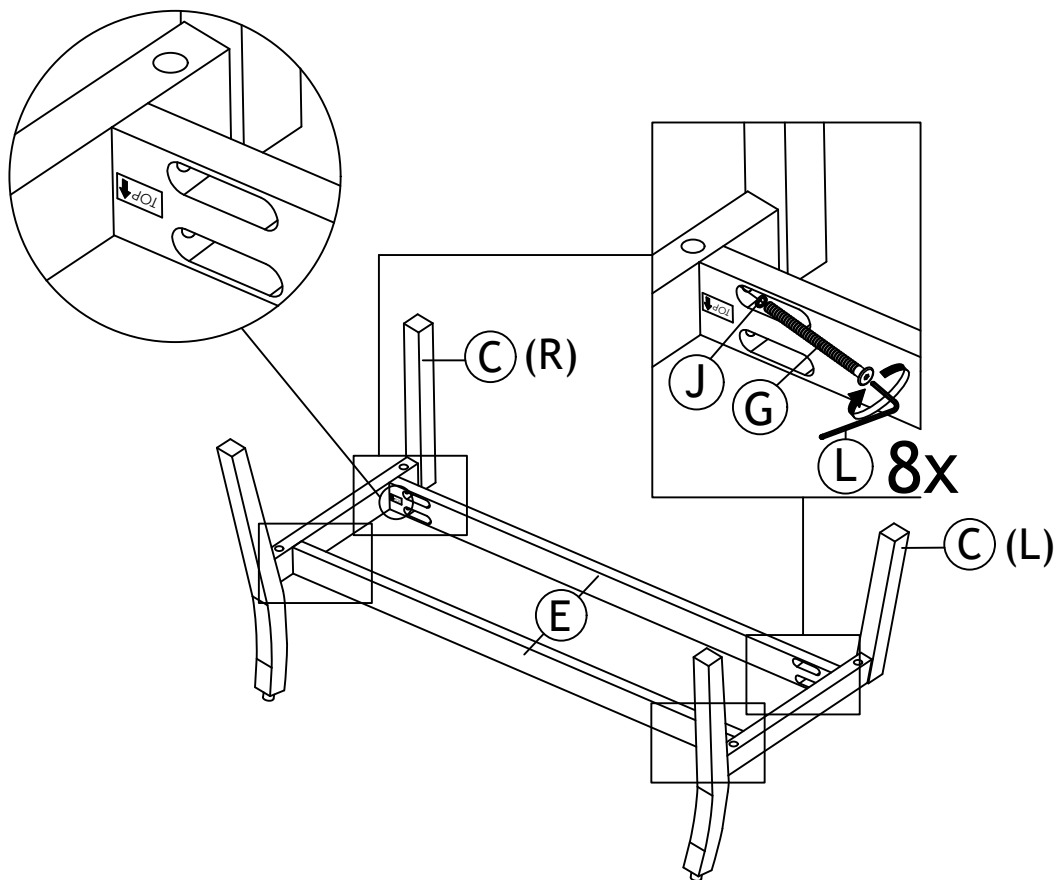


STEP 3

Attach the completed frame to the Seat Cushion (B), aligning the holes. Secure using 4 Bolts (H) and Spring Washers(J). Tighten all bolts securely with Allen Key (L).

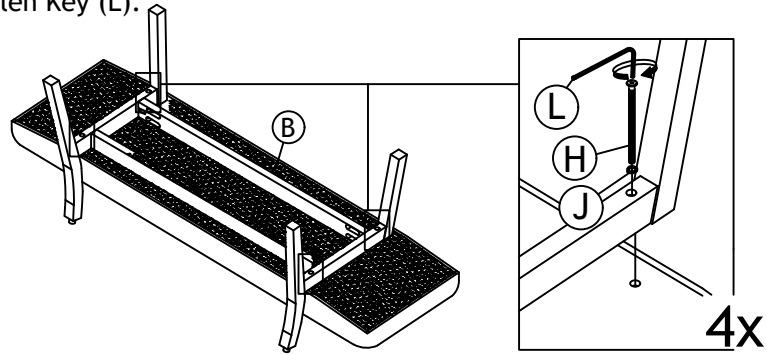


STEP 4

Attach the Backrest Support Rail (D) to the top of the Legs (C) using 2 Screws (I). Tighten all screws securely using the Allen Key (L).

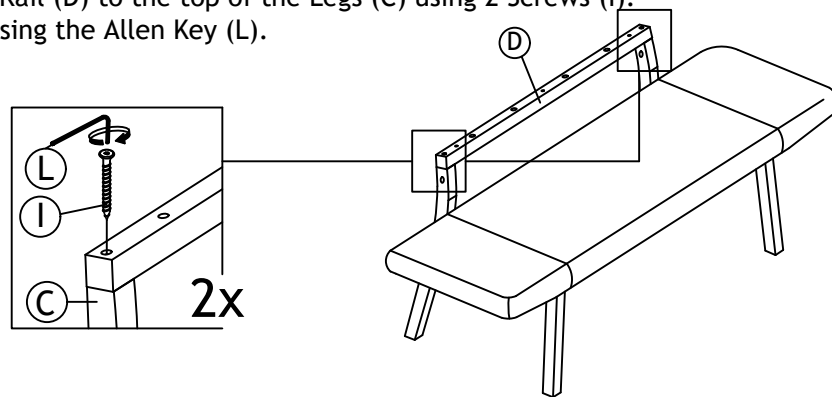


STEP 5

Insert 4 Large Wood Dowels (M) into the holes of the support rail.

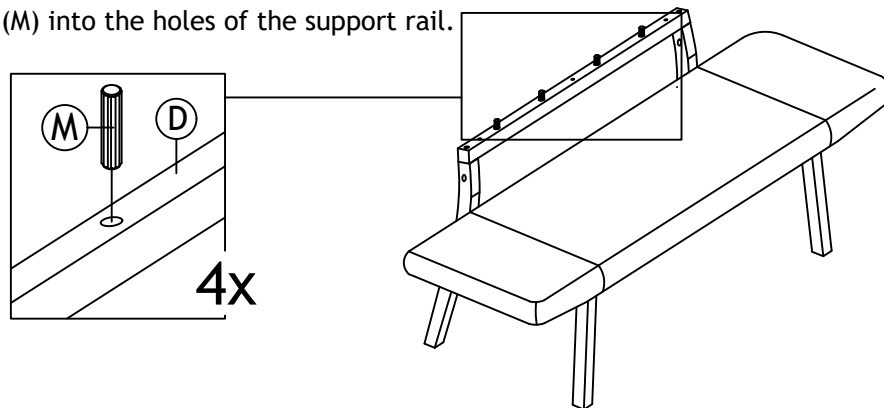


STEP 6

Insert the Backrest (A) onto the wood dowels and slide it firmly into place.

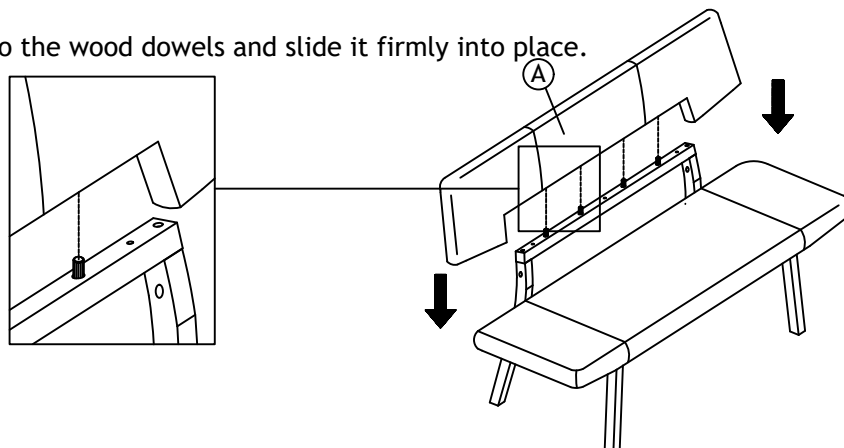


STEP 7

Attach the Backrest (A) using 5 Bolts (F) and Spring Washers (J) as shown.
Tighten bolts secure with Allen Key (L).

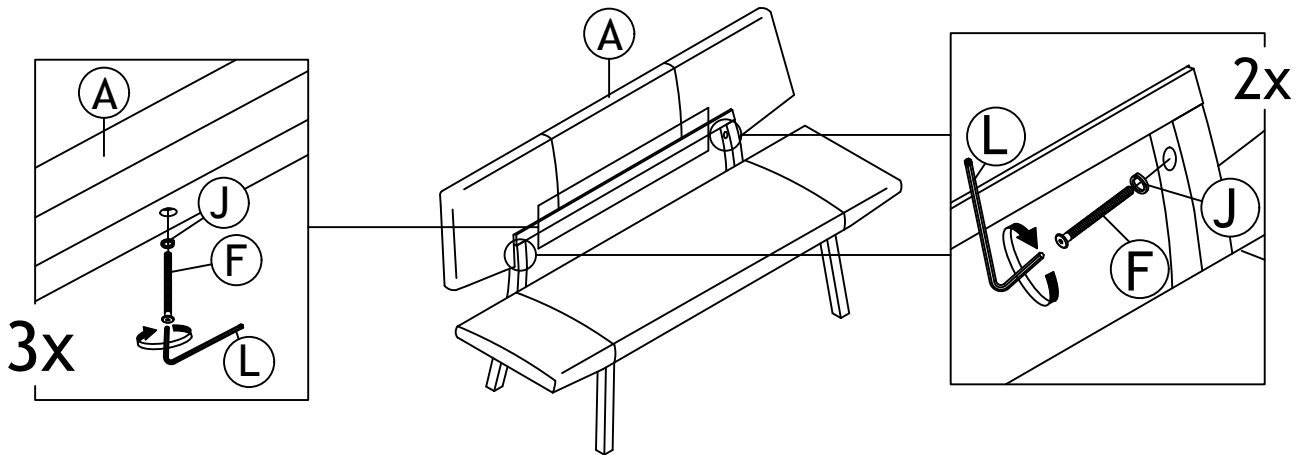


STEP 8

Insert 2 Wood Buttons (K) into the side of the Back Legs (C) and push firmly into place.

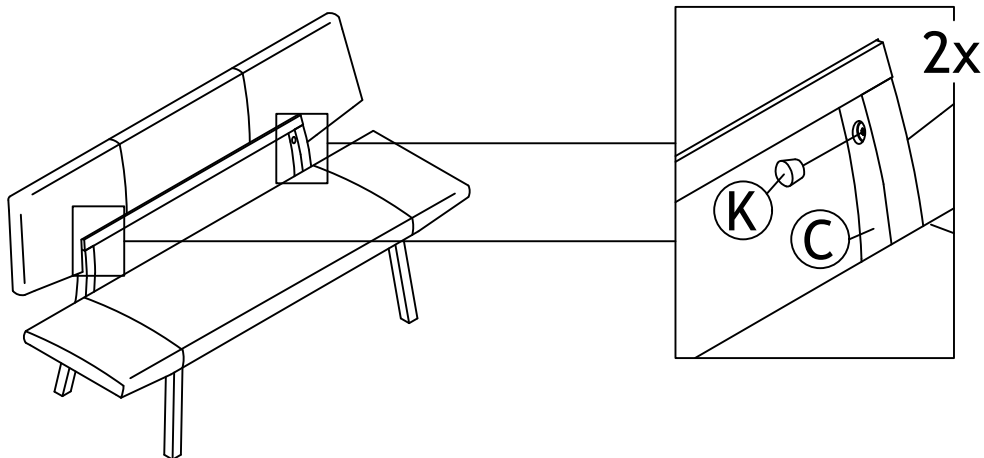

Your assembly is now complete

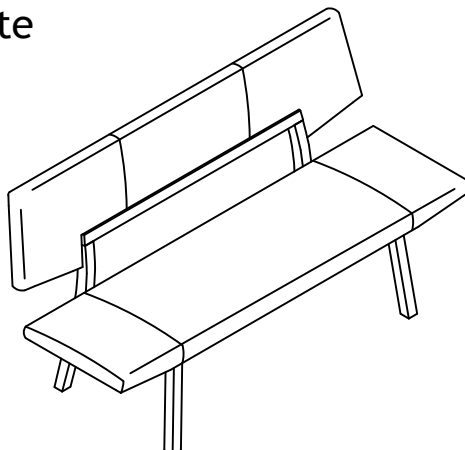



Product Assembly Instructions

Item: Channell Corner Unit

Helpers needed to assemble: 2


Estimated time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the **HARDWARE LIST** below.


Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

Retain the Allen key for regular maintenance. We recommend end tightening all screws every three months to ensure continued stability and performance.


PART LIST

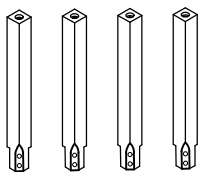


A : LEG x4

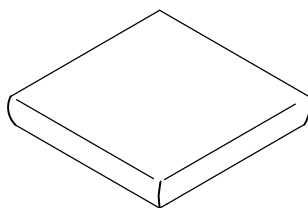

B : CUSHION SEAT x1

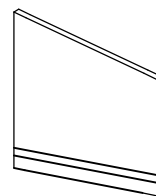


C : BACKREST WITH ZIP x1

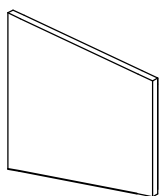

D : BACKREST x1


HARDWARE LIST



E : JCBC BOLT M6 x 70MM x3



F : JCBC BOLT M6 x 40MM x16



G : JCBC BOLT M6 x 30MM x8



H : SPRING WASHER x19



I : FLAT WASHER x19



J : M4 ALLEN KEY x1



K : METAL BRACKET WITH SPACER x2




L : METAL BRACKET x2

STEP 1

IMPORTANT NOTE: Do not fully tighten bolts from this step.


-Unzip the zipper on the Backrest (C) as shown in the diagram. Align the holes on Backrest (D). Insert 3 Bolts (E) together with Spring Washers (H) and Flat Washers (I). Loosely tighten with Allen key provided.

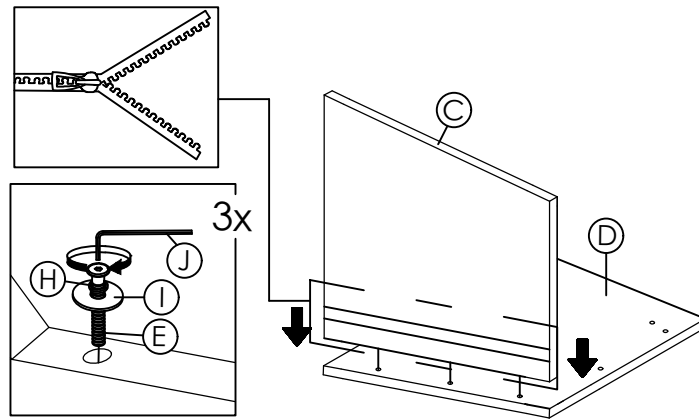

STEP 2

Attach Cushion Seat (B) to the Backrest (C) and (D) using 8 Bolts (F), Spring Washers (H) and Flat Washers (I).


Tighten all bolts securely, including from Step 1.

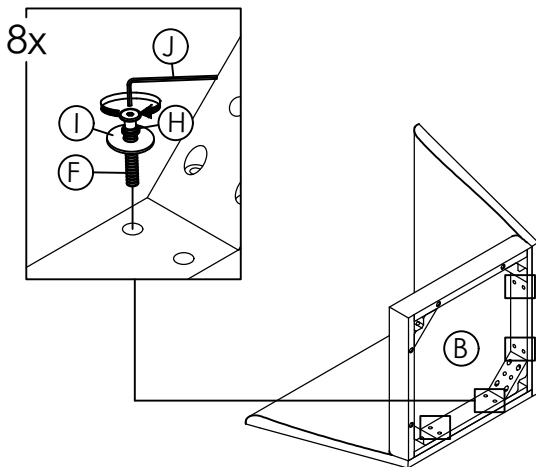

STEP 3


Insert the Legs (A) into the corners of the Cushion Seat (B).

Secure each leg using 8 Bolts (F) together with Spring Washers (H) and Flat Washers (I). Tighten all bolts securely.

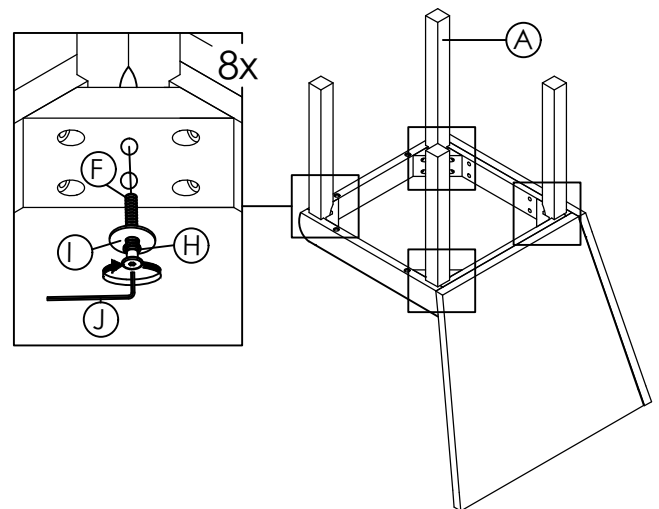


STEP 4

Attach the Metal Bracket with Spacer (K) to the holes located at front leg. Use 2 Bolts (G) and tighten all bolts securely.

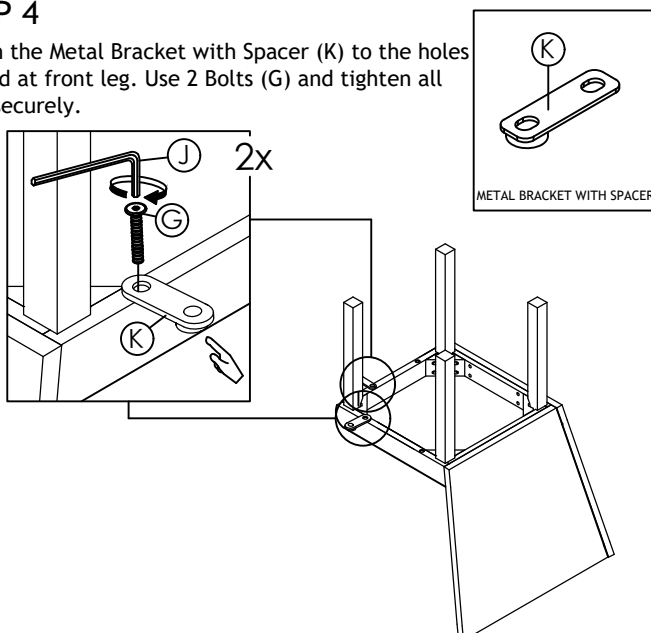

STEP 5


Attach the Metal Bracket (L) to the side leg. Use 2 Bolts (G) and tighten all bolts securely.

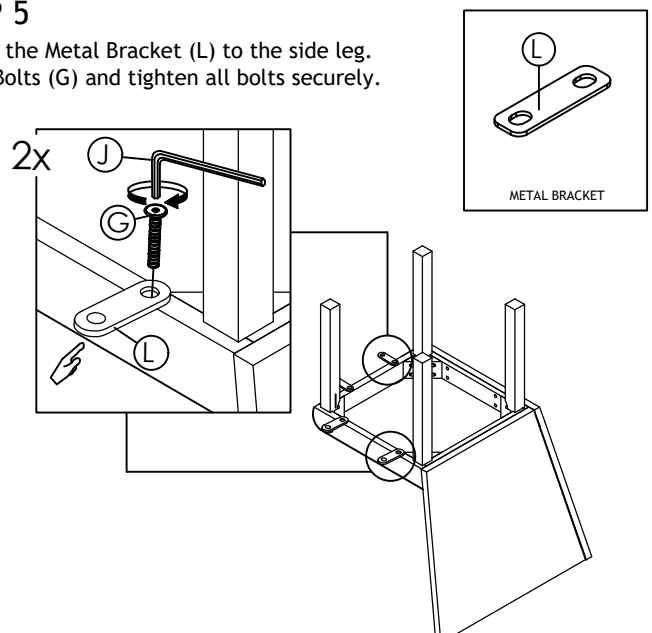

Bench to Corner Unit Assembly


Step 1

Align the metal brackets to the underside of the seat bench, using 2 Bolts (G). Tighten all bolts securely.

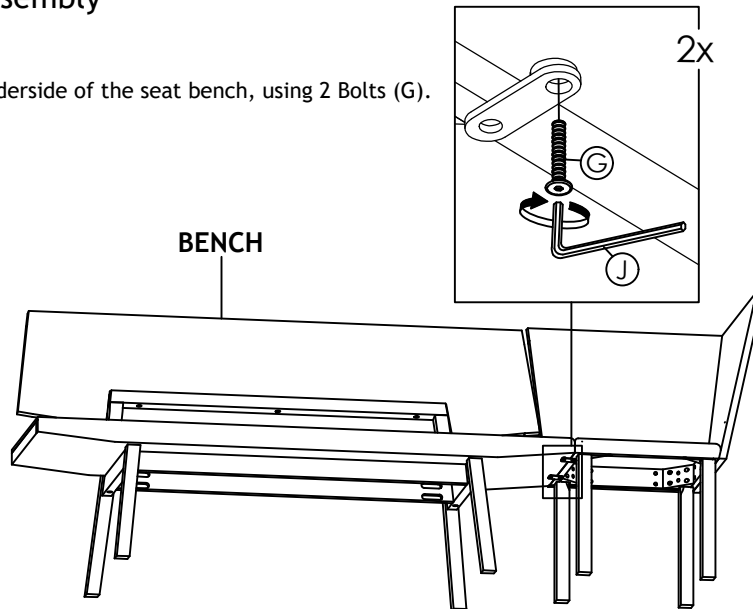

STEP 2

Attach the other bench to the opposite side of the corner unit using 2 Bolts (G). Tighten all bolts securely.

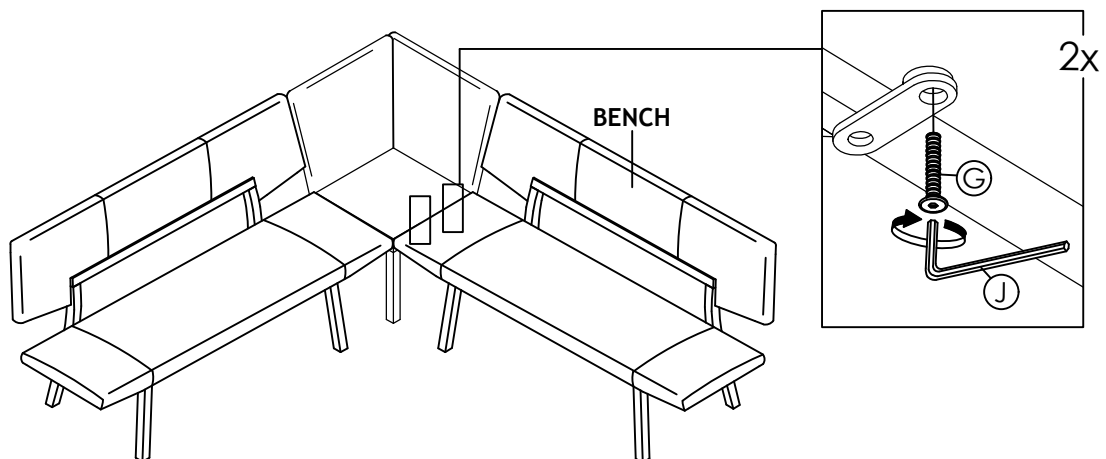

Your assembly is now complete

