

Product Assembly Instructions

HUDSON ADJUSTABLE BARSTOOL 26"/30"

Helpers needed to assemble: 2

Estimate time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process, and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a smooth, flat surface before assembly, and carefully follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance.

		Parts List	Q'TY			Hardware list	Q'TY
A		Upper Leg	2	1		Ø1/4" x 1" Bolts	12
B		Lower Leg	2	2		Ø1/4" x 1-1/2" Bolts	8
C		Footrest Ring	2	3		Ø1/4" x 1-1/4" Bolts	4
D		Swivel Plate	2	4		Ø1/4" x 5/8" Bolts	16
E		Seat Cushion	2	5		Ø1/4" x Ø10 Spring washer	20
F		Backrest	2	6		Ø1/4" x Ø13 Flat washer	4
G		Foot Cap	8	7		Ø1/4" x Ø16 Flat washer	16
H		Extension Foot	8	8		Allen key	2


Step 1:

Attach the Backrest (F) to the Seat Cushion (E) and secure it with 2 Bolts (3), Spring Washer (5) and Flat Washer (6) from the inside of the seat cushion, and 2 Bolts (1) from the back of the backrest, as shown in the diagram.

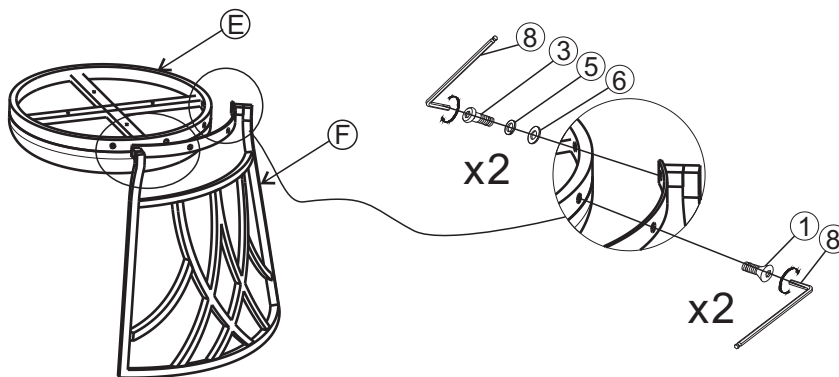


Step 2:

Attach Lower Leg (B) to Upper Leg (A), aligning the notched sections to form the half-lap joint as shown in the diagram.

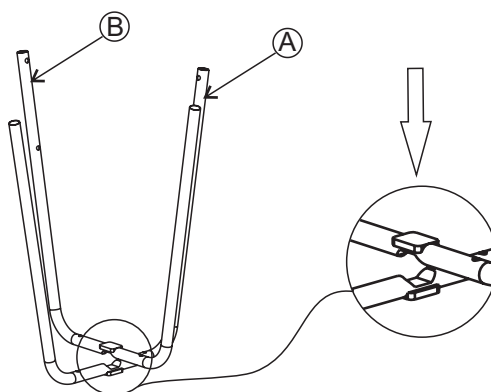


Step 3: (Do not fully tighten from this step)

Align the mounting holes on the legs with the pre-drilled holes on the Swivel Plate (D), Insert 4 Bolts (2), Spring Washer (5) and Flat Washer (7). Loosely tighten the bolts using the provided Allen Key (8).

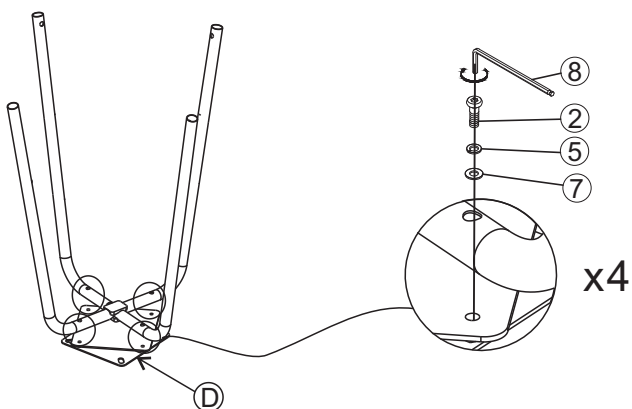

Step 4:


Align the Footrest Ring (C) with the mounting holes on the legs and secure it using 4 Bolts (1). Fully tighten all bolts along with bolts from Step 3 with Allen Key (8) provided.

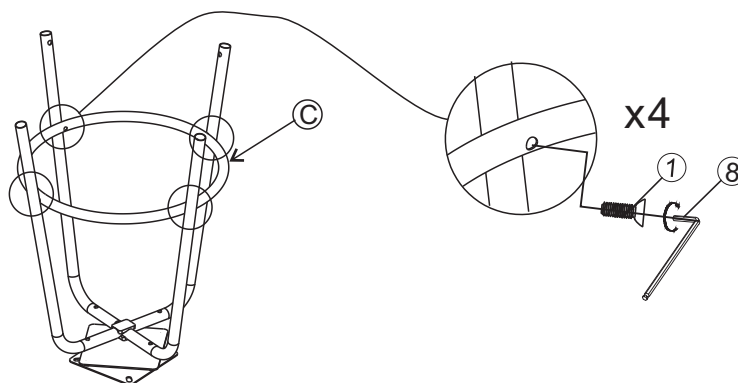

Step 5:


For 26" counter height assembly:

Insert the Foot Cap (G) on to the ends of the Upper Leg (A) and Lower leg (B).

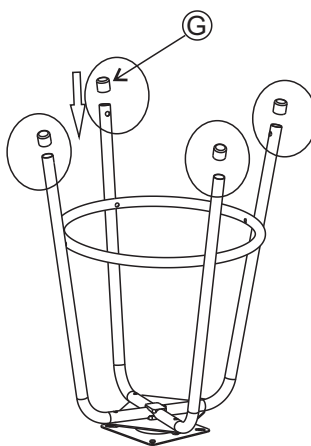


For 30" bar height assembly:

Attach the Extension Foot (H) to the ends of the Upper Leg (A) and Lower leg (B). Align the mounting hole and secure each Extension Foot with 1 Bolt (4).

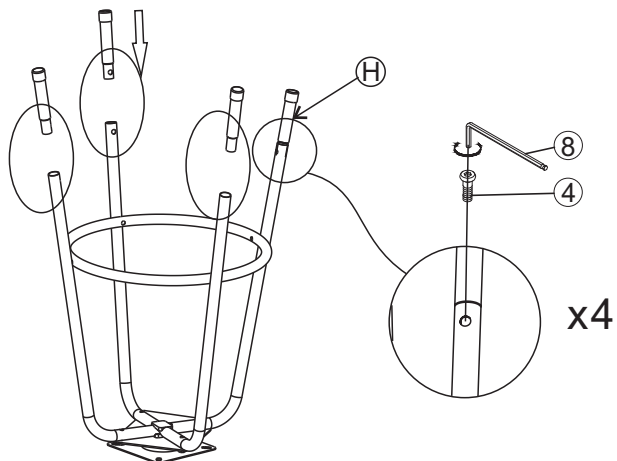

Step 6:

Align the swivel plate of the assembled leg with the mounting holes on the underside of the Seat Cushion (E). Secure it with 4 Bolt (4), Spring washer (5) and Flat Washer (7) and fully tighten all bolts using Allen Key (8).

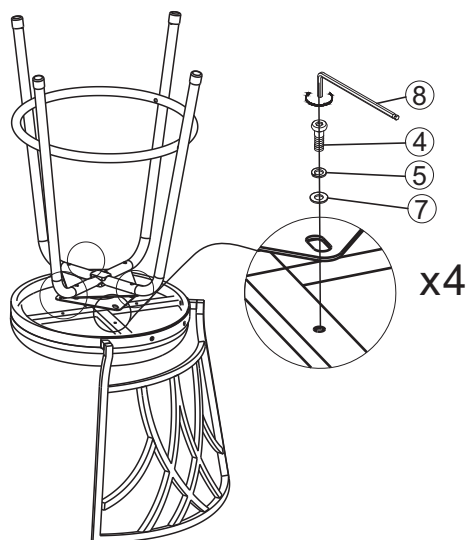

Assembly Is Complete



**CONGRATULATIONS ON YOUR
PURCHASE!**



**•MISSING PARTS?
CALL US!**



**FOR ANY PRODUCT RELATED
QUESTIONS, YOU MAY CALL OR
EMAIL THE MANUFACTURER AT
818-767-6626**

info@armenliving.com