

Helpers needed to assemble: 2

Estimate time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process, and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a smooth, flat surface before assembly, and carefully follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance.

		Parts List	Q'TY
A		Back Right Leg	1
B		Back Left Leg	1
C		Front Right Leg	1
D		Front Left Leg	1
E		Seat Frame	1
F		Footrest	1
G		Seat	1

		Hardware list	Q'TY
1		Ø1/4" x 5/8" Bolts	12
2		Ø1/4" x 1-5/8" Bolts	4
3		Ø1/4" x Ø10 Spring washer	16
4		Ø1/4" x Ø13 Flat washer	4
5		Ø1/4" x Ø16 Flat washer	12
6		Allen key	1


Step 1:

Do not fully tighten from this stage. Attach the Back Right Leg (A), Back Left Leg (B), Front Right Leg (C), and Front Left Leg (D) to the Seat Frame (E), ensuring each leg is installed in the correct corner as shown in the diagram. Insert 8 Bolts (1), 8 Spring Washers (3), and 8 Flat Washers (5). Loosely tighten the bolts using the provided Allen Key (6)

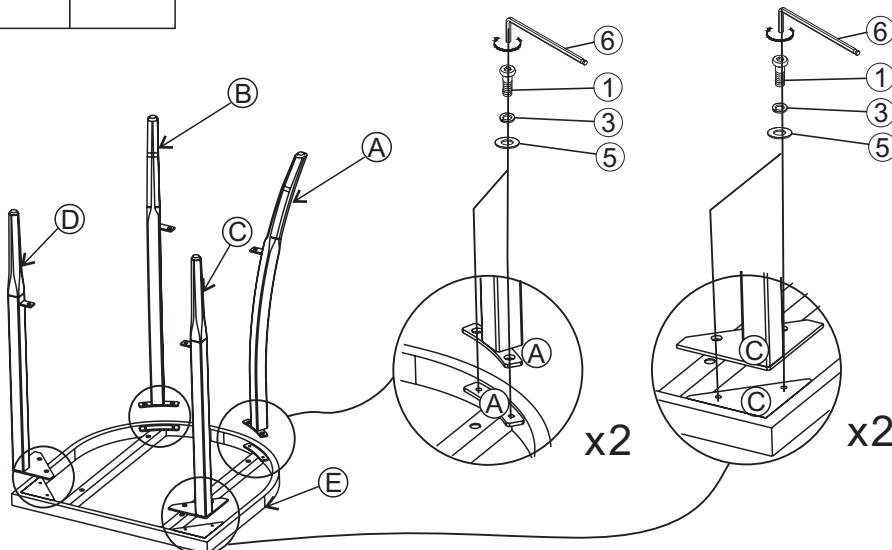


Step 2:

Attach the Footrest (F) to the legs as shown in the diagram. Secure it using 4 Bolts (1), 4 Spring Washers (3), and 4 Flat Washers (4). Fully tighten all bolts along with bolts from Step 1 with the provided Allen Key (6).

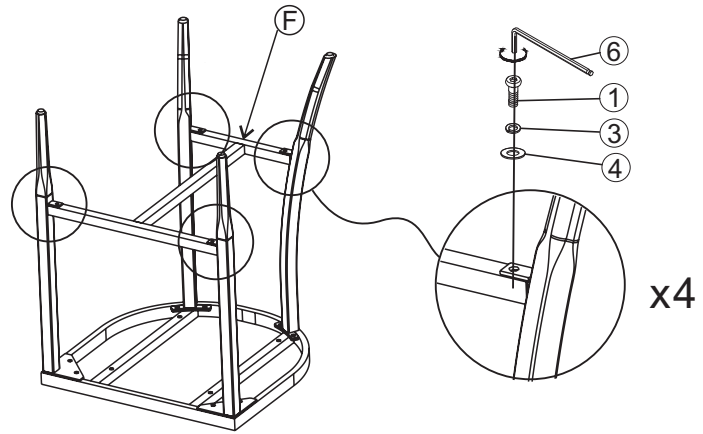


Step 3:

Attach the Seat Frame to the Seat (G). Secure it with 4 Bolt (2), Spring Washer (3) and Flat Washer (5) as shown in the diagram. Tighten all bolts with the provided Allen Key (6).

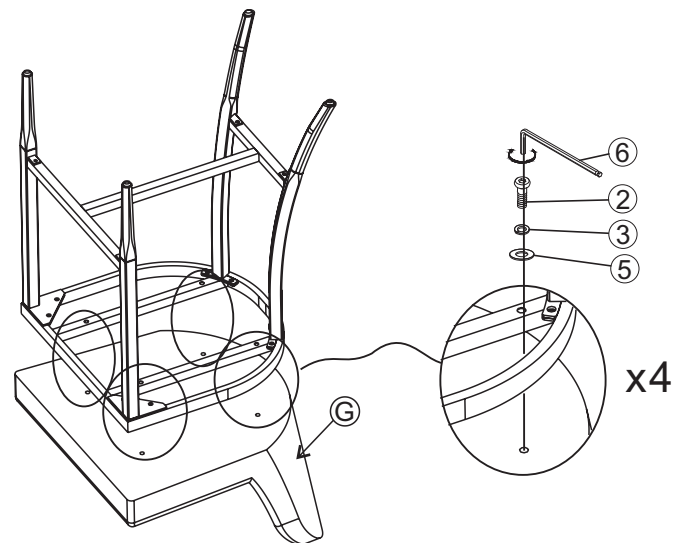

Assembly Is Complete

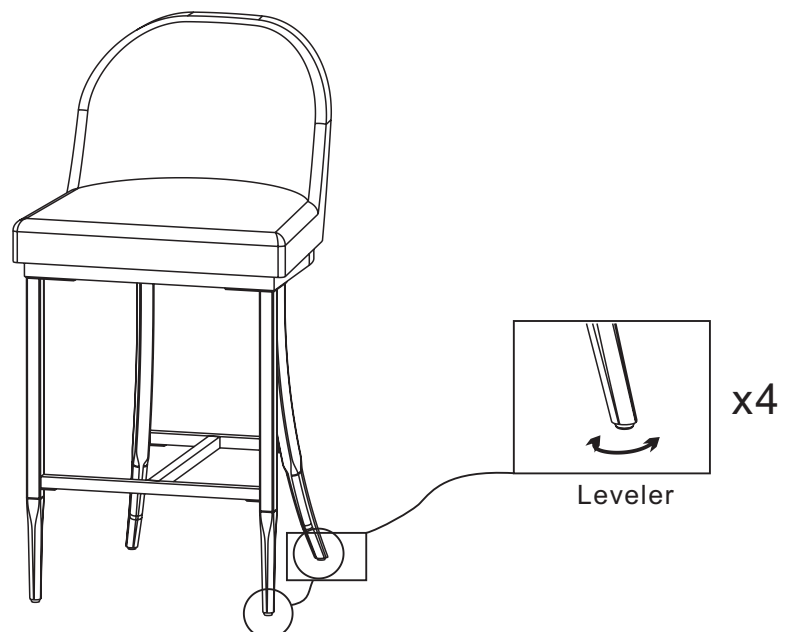



**CONGRATULATIONS ON YOUR
PURCHASE!**



**• MISSING PARTS?
CALL US!**



**FOR ANY PRODUCT RELATED
QUESTIONS, YOU MAY CALL OR
EMAIL THE MANUFACTURER AT
818-767-6626**

info@armenliving.com