


PRODUCT ASSEMBLY INSTRUCTIONS

Item#: LOMBARD BUFFET


Helpers needed to assemble: 2

Estimate time frame to assemble: 30 minutes

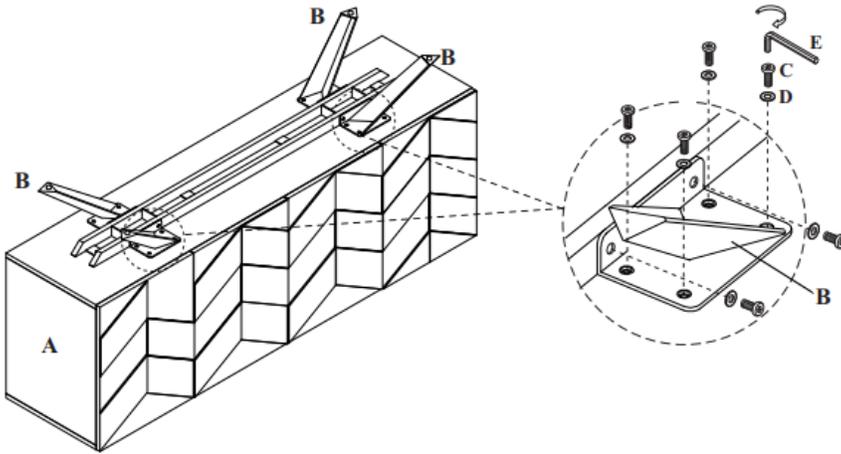


#	Picture	Description	Quantity
A		Sideboard	1
B		Leg	4
C		Bolt – M8 x 20mm	24
D		Flat Washer -M8	24
E		Allen Key – M4	1

- **Step 1:** Place the sideboard upside down on the floor as seen. Make sure it's on a safe surface where the table cannot be scratched and or damaged.
- **Step 2:** Align the table leg with the sideboard holes as seen on all 4 sides.
- **Step 3:** Identify the first set of side legs and the bolt down using the Allen Key M4 as follows (4 Bolt – M8 x 20mm; 4 flat washers) per leg.
- **Step 4:** Using the Allen Key you will tighten the bolts until the leg is firmly attached.
 - i. Repeats Steps 2-4 for each leg.

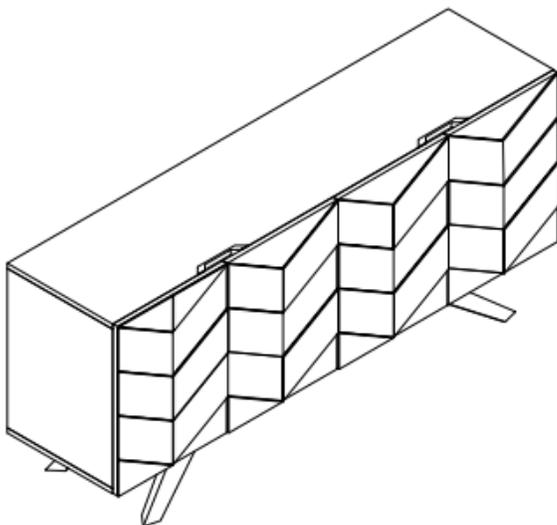


- **Step 9:** Flip the buffet over upright as seen.
- **Step 10:** Test the buffet is firmly on the ground and the buffet does not wiggle.
- **Step 11:** Enjoy your new buffet.

ANTI-TIP KIT ASSEMBLY

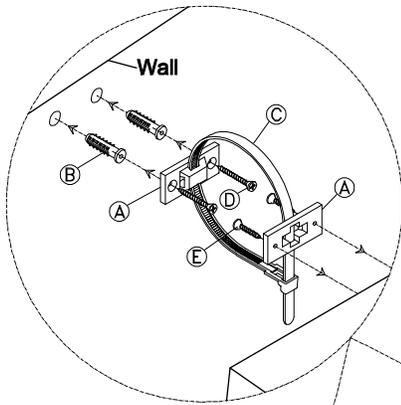

#	Picture	Description	Quantity
A		Bracket - 22 x 43mm	4
B		Dry wall anchor - Ø8x40mm	4
C		Zip Tie - 5 x 250mm	2
D		Screw - M4 x 40mm	4
E		Screw - M4 x 20mm	4

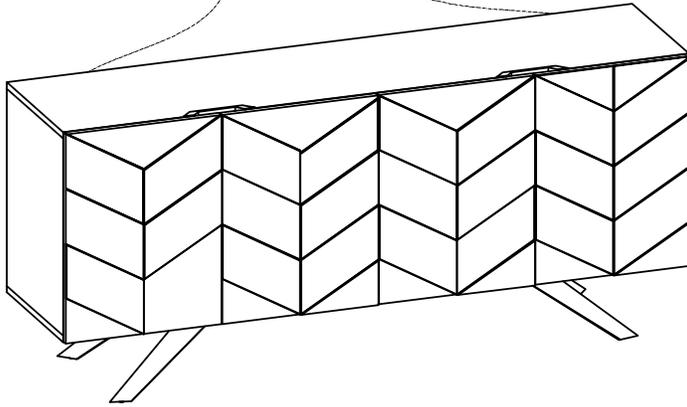

- **Step 1:** Using a stud finder, find a wall stud to attach the bracket vertically.
- **Step 2:** Once you have found the location, mark and drill a hole through the stud by using a 1/4" drill bit.
- **Step 3:** Attach the bracket to the wall stud using the (Screw - M4 x 40mm) Make sure it aligns to the same width and height as the buffet brackets.
- **Step 4:** Attach the bracket to the buffet horizontally using the (Screw – M4 x 20mm). Make sure it aligns to the same width and height as the wall brackets
- **Step 5:** Once brackets have been installed on both the wall and the buffet. Move the buffet to its final position against the wall.
- **Step 6:** Thread the strap through the wall bracket first and loop it in through the buffet bracket and tighten until snug. Do not overtighten.