

Helpers needed to assemble: 2

Estimate time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process, and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a smooth, flat surface before assembly, and carefully follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance.

		Parts List	Q'TY
A		Leg	8
B		Seat Cushion	2
C		Footrest Ring	2


		Hardware list	Q'TY
1		Ø1/4" x 3/8" Bolts	8
2		Ø1/4" x 5/8" Bolts	16
3		Ø1/4" x 3/4" Bolts	8
4		Ø1/4" x Ø10 Spring washer	32
5		Ø1/4" x Ø13 Flat washer	24
6		Ø1/4" x Ø16 Flat washer	8
7		Allen key	2

Step 1:
Attach the 4 Legs (A) as shown in the diagram.

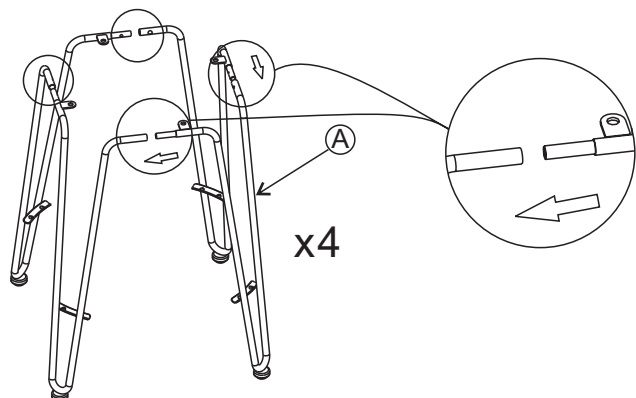


Step 2:

Do not fully tighten the bolts from this stage. Insert 4 Bolts (1), Spring Washers (4), and Flat Washers (5). Loosely tighten the bolts using the provided Allen Key (7).

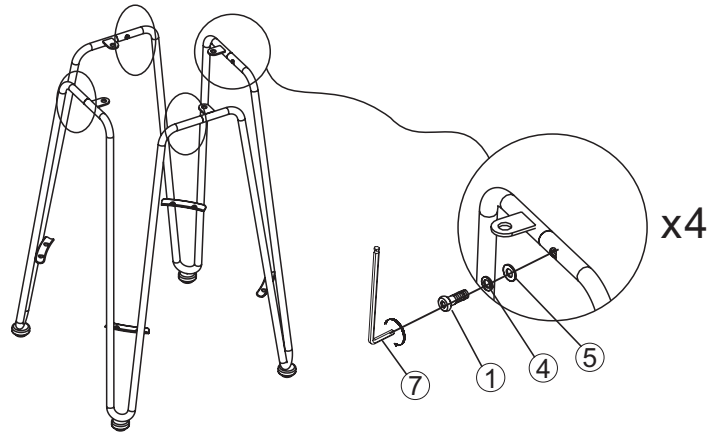


Step 3:

Align the Footrest Ring (C) with the brackets on the legs, ensuring the mounting holes are aligned. Insert 8 Bolts (2), Spring Washers (4), and Flat Washers (5). Loosely tighten the bolts using the provided Allen Key (7).

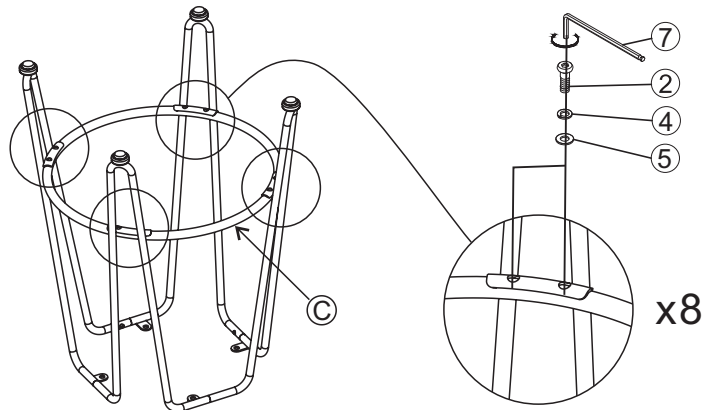


Step 4:

Align the assembled legs with the mounting holes on the underside of the Seat Cushion (B). Secure them using 4 Bolts (3), Spring Washers (4), and four Flat Washers (6). Once all bolts are in place, fully tighten all bolts along with the bolts from Steps 2 and 3, using the provided Allen Key (7).

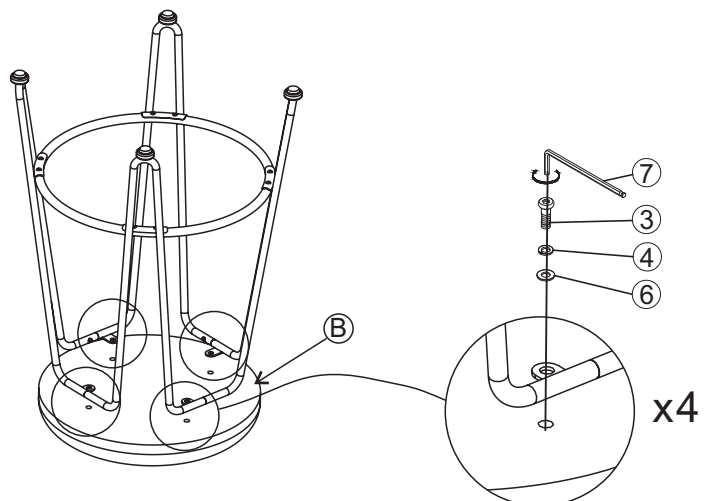

Assembly Is Complete

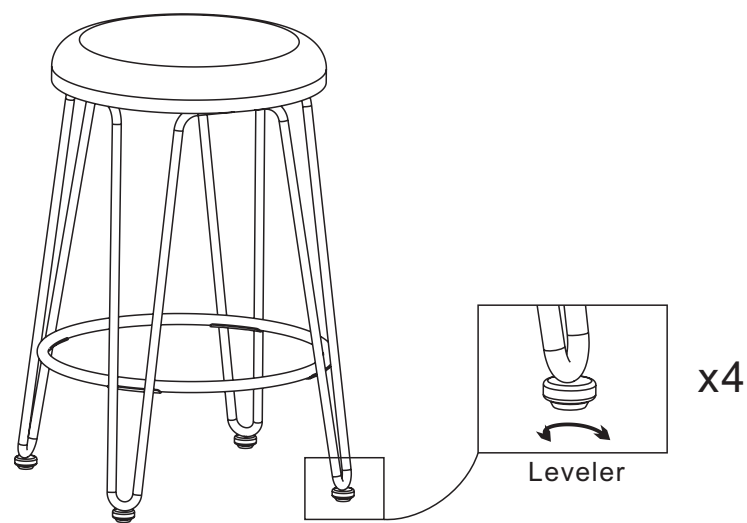



**CONGRATULATIONS ON YOUR
PURCHASE!**



**•MISSING PARTS?
CALL US!**



**FOR ANY PRODUCT RELATED
QUESTIONS, YOU MAY CALL OR
EMAIL THE MANUFACTURER AT
818-767-6626**

info@armenliving.com