

Helpers needed to assemble: 2

Estimate time frame to assemble: 10 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process, and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a smooth, flat surface before assembly, and carefully follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance.

		Parts List	Q'TY			Hardware list	Q'TY
A		Upper Leg	1	1		Ø1/4" x 1-3/8" Bolts	1
B		Lower Leg	1	2		Ø1/4" x 1" Bolts	8
C		Footrest Ring	1	3		Ø1/4" x 1-1/4" Bolts	4
D		Swivel Plate	1	4		Ø1/4" x Ø10 Spring washer	9
E		Seat Cushion	1	5		Ø1/4" x Ø16 Flat washer	9
				6		Allen key	1


Step 1:

Do not fully tighten from this step. Attach Lower Leg (B) to Upper Leg (A), align the notched sections to form the half-lap joint. Secure using 1 Bolt (1), Spring washer (4) and Flat washer (5) as shown in the diagram. Loosely tighten the bolts with the provided Allen Key (6).

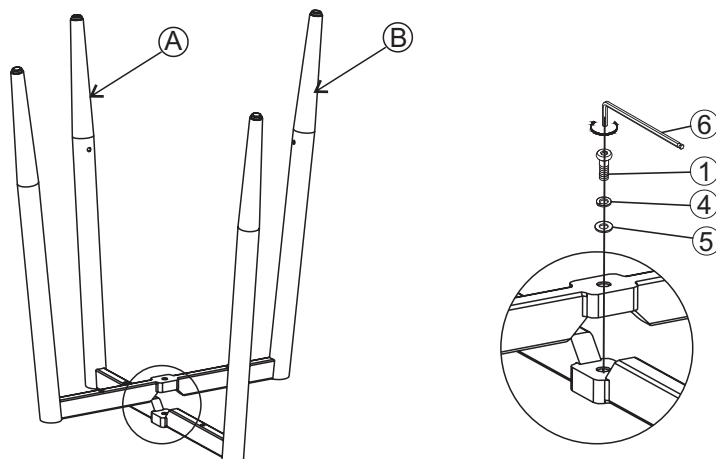


Step 2:

Align the Footrest Ring (C) with the mounting holes on the legs. Secure using 4 Bolts (3). Fully tighten all bolts along with bolts from Step 1 with Allen Key (6) provided.

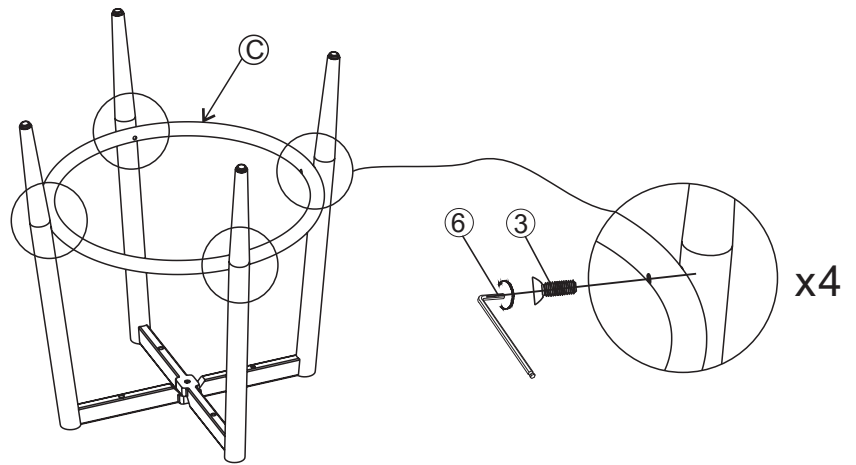


Step 3:

Align the mounting holes on the legs with the pre-drilled holes on the Swivel Plate (D), Insert 4 Bolts (2), Spring Washer (4) and Flat Washer (5). Fully tighten the bolts using the provided Allen Key (6).

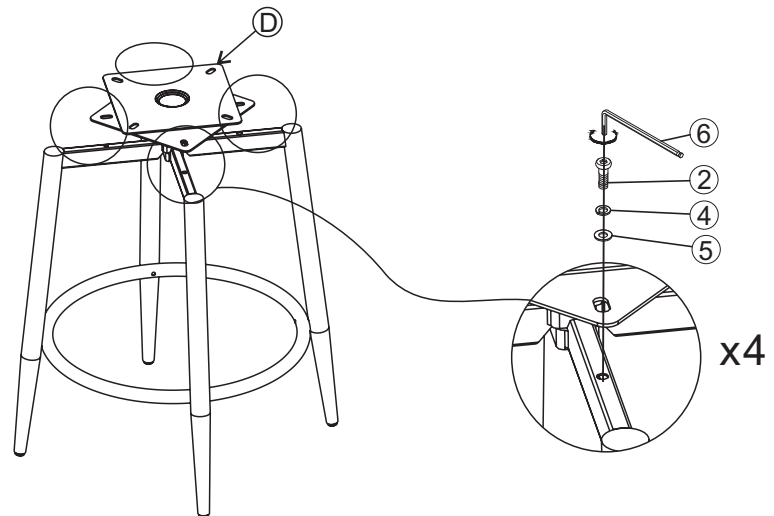


Step 4:

Align the swivel plate of the assembled leg with the mounting holes on the underside of the Seat Cushion (E). Secure using 4 Bolts (2), Spring Washer (4) and Flat Washer (5) in place and fully tighten all bolts securely.

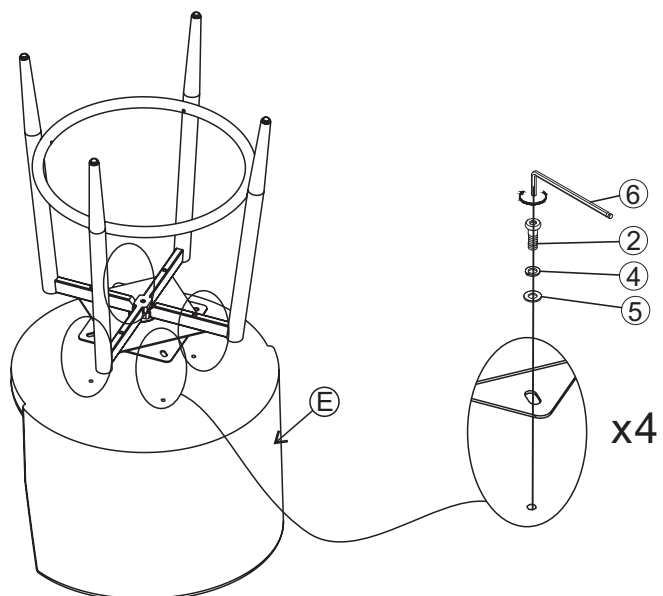

Assembly Is Complete

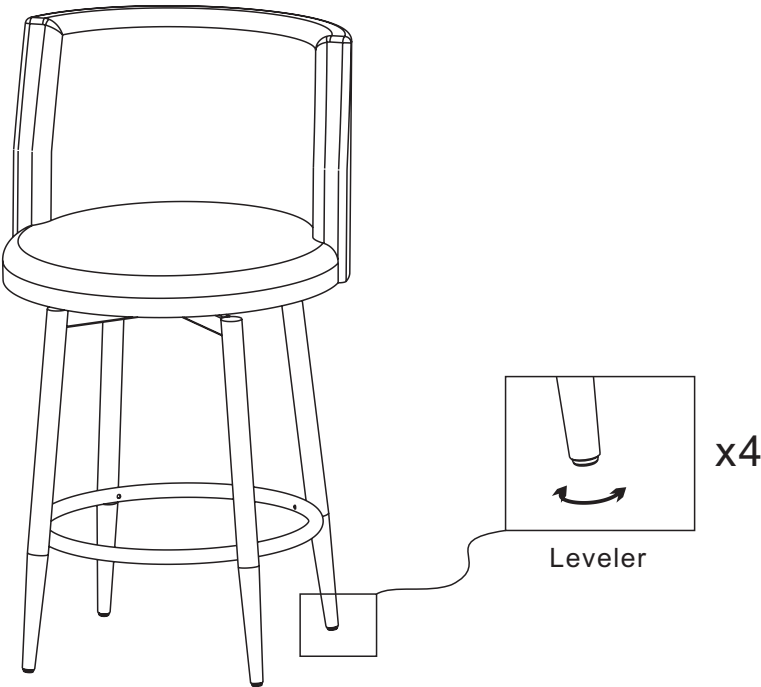



**CONGRATULATIONS ON YOUR
PURCHASE!**



**•MISSING PARTS?
CALL US!**



**FOR ANY PRODUCT RELATED
QUESTIONS, YOU MAY CALL OR
EMAIL THE MANUFACTURER AT
818-767-6626**

info@armenliving.com