


Item # : LCMRBAWHAG26 / LCMRBAWHPB26 Merie 26" Barstool LCMRBAWHAG30 / LCMRBAWHPB30 Merie 30" Barstool

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.



Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.

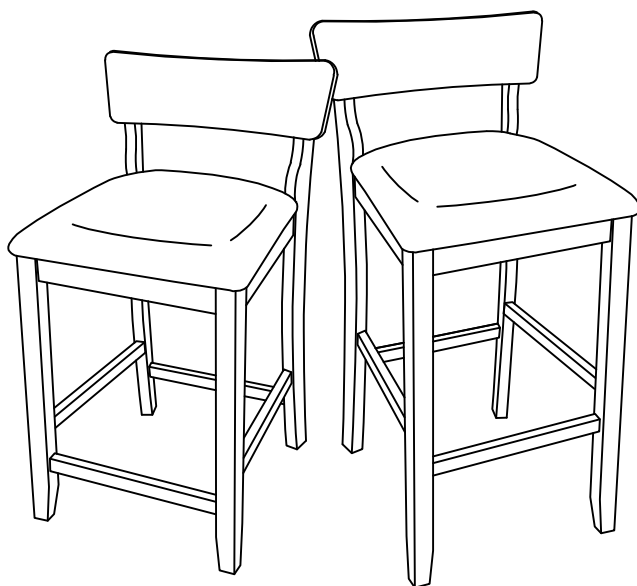


PARTS LIST			
NO.	COMPONENT		QTY.
A	Back Panel		1 pc
B	Box Seat		1 pc
C	Front Leg - Left (CL)		1 pc
D	Front Leg - Right (CR)		1 pc
E	Side Stretcher - Left (CL)		1 pc
F	Side Stretcher - Right (CR)		1 pc
G	Front Stretcher		1 pc
H	Cushion Seat		1 pc

HARDWARE LIST			
NO.	COMPONENT		QTY.
1	JCBC Bolt M6 x 35mm		2 pcs
2	JCBC Bolt M6 x 60mm		4 pcs
3	JCBC Bolt M6 x 80mm		4 pcs
4	Spring Washer		10 pcs
5	Flat Washer		10 pcs
6	CB Screw M4 x 32mm		5 pcs
7	CB Screw M4 x 38mm		6 pcs
8	Allen Wrench		1 pc

* Phillips screwdriver not included *

Step 1

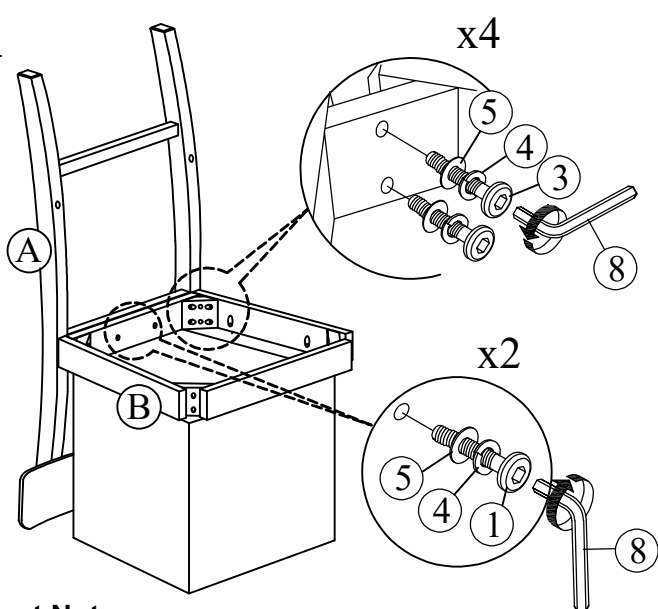


Important Note :

Ensure all bolts remain loosely tightened until final assembly adjustments are made.

Do not fully tighten from this step

Attach Box Seat (B) to the centre section 2 holes on Back Panel (A) using 2pcs JCBC bolts (1), 2pcs Spring Washers (4) and 2pcs Flat Washers (5). Loosely tighten with Allen Wrench (8). Insert 4pcs JCBC bolts (3), 4pcs Spring Washers (4) and 4pcs Flat Washers (5) to the corner holes as shown in the diagram. Loosely tighten with Allen Wrench (8).

Step 3

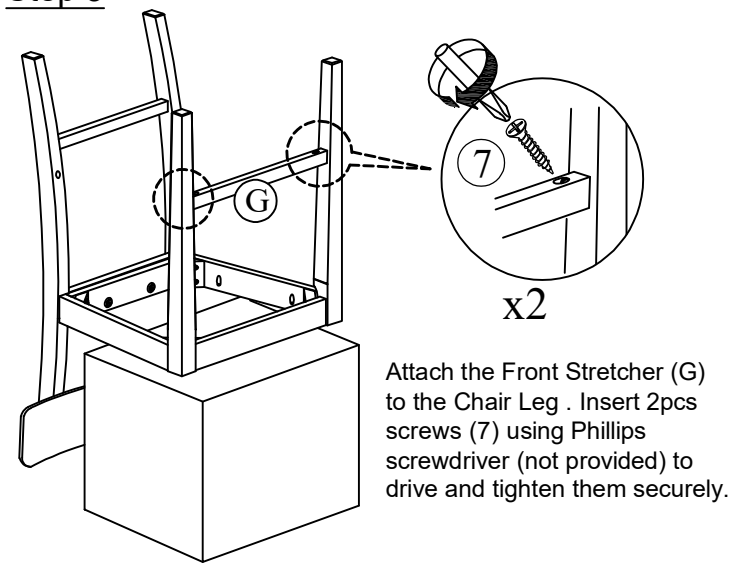


Attach the Front Stretcher (G) to the Chair Leg . Insert 2pcs screws (7) using Phillips screwdriver (not provided) to drive and tighten them securely.

Step 5


Final Adjustment Step :

1. Place the barstool on a flat, level surface.
2. Check that all legs make even contact with the floor. If uneven, adjust the Box Seat (B) by tilting as needed.
3. Once level, securely tighten all bolts.

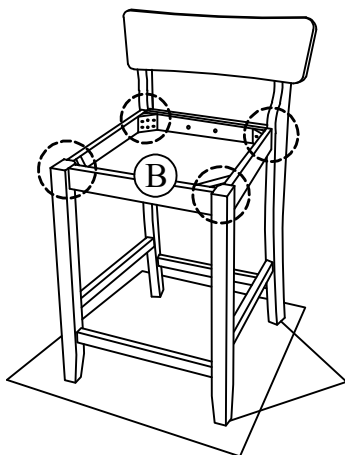


NOTE: ENSURE ALL LEGS ARE LEVEL TO THE FLOOR BEFORE FULLY TIGHTENING ALL BOLTS .

Step 2

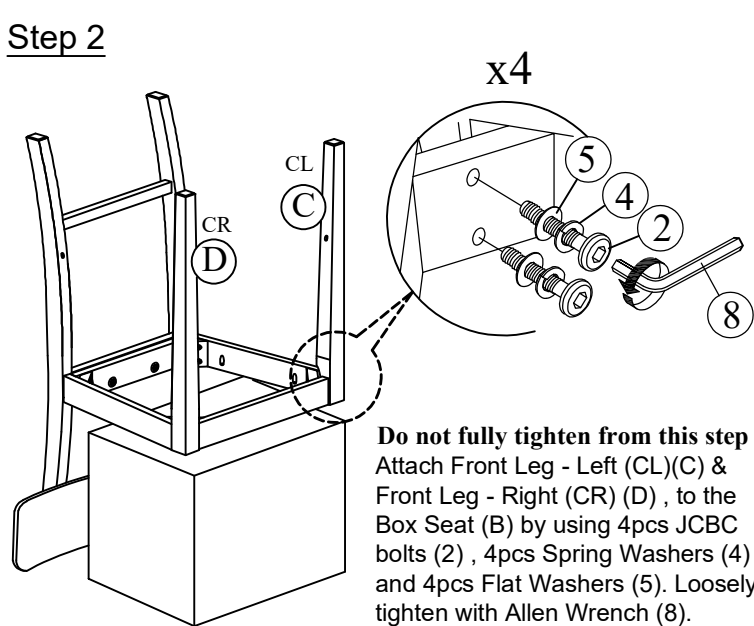

Do not fully tighten from this step
Attach Front Leg - Left (CL)(C) & Front Leg - Right (CR) (D) , to the Box Seat (B) by using 4pcs JCBC bolts (2) , 4pcs Spring Washers (4) and 4pcs Flat Washers (5). Loosely tighten with Allen Wrench (8).

Step 4

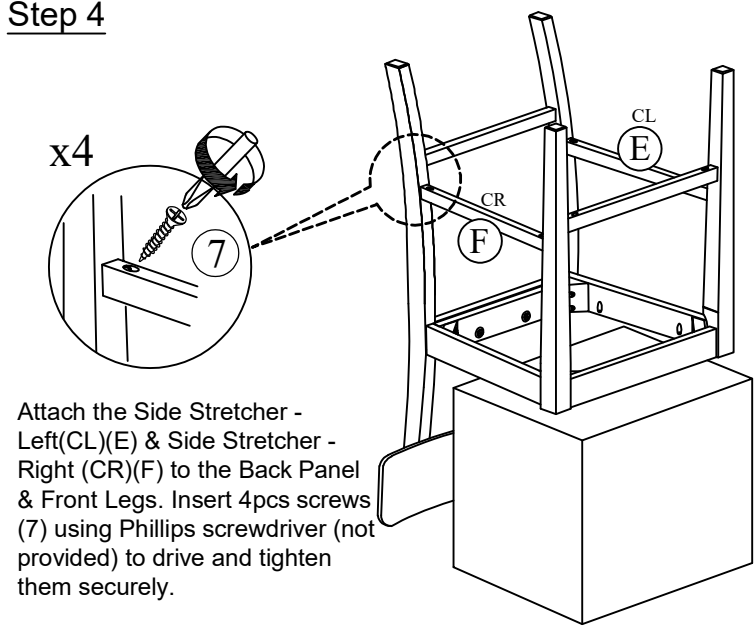

Attach the Side Stretcher - Left(CL)(E) & Side Stretcher - Right (CR)(F) to the Back Panel & Front Legs. Insert 4pcs screws (7) using Phillips screwdriver (not provided) to drive and tighten them securely.

Step 6

Turn the barstool up right side and place underneath the Cushion Seat (H). Insert 5pcs screws (6) by using Phillips screwdriver to drive and tighten them securely.

