

Product Assembly Instructions

Item#: MARVIN BARSTOOL

Helpers needed to assemble: 2

Estimated time frame to assemble: 15 minutes

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

Step 1:

Before beginning assembly, place all parts on a smooth, flat surface.

Turn the Frame Leg (A) right side up. Attach the Backrest (B) to the Frame Leg (A).

Insert 3pcs Bolt Ø1/4" x 3/4" (1) with Flat Washer (2) and Spring Washer (3) as shown, and tighten using the Allen Key (4).

Make sure the hole on the metal bracket of the Backrest (B) aligns with the hole on the Frame Leg (A) before tightening.








Step 2:

Place the seat onto the Frame Leg (A) and turn the barstool right side up.


Insert 4pcs Bolt Ø1/4" x 3/4" (1) with Flat Washer (2) and Spring Washer (3) as shown, and tighten using the Allen Key (4).

Make sure the hole on the bottom of the Seat aligns with the hole on the metal bracket of the Frame Leg (A) before tightening.

Your assembly is complete. Enjoy your new barstool!

| # | Picture | Description | Q'TY. |
|---|---|---------------------------|-------|
| A |  | Frame leg | 1 |
| B |  | Backrest | 1 |
| C |  | Seat | 1 |
| 1 |  | Ø1/4" x 3/4" Bolts | 7 |
| 2 |  | Ø1/4" x Ø16 Flat washer | 7 |
| 3 |  | Ø1/4" x Ø10 Spring washer | 7 |
| 4 |  | Allen key | 1 |

STEP 1

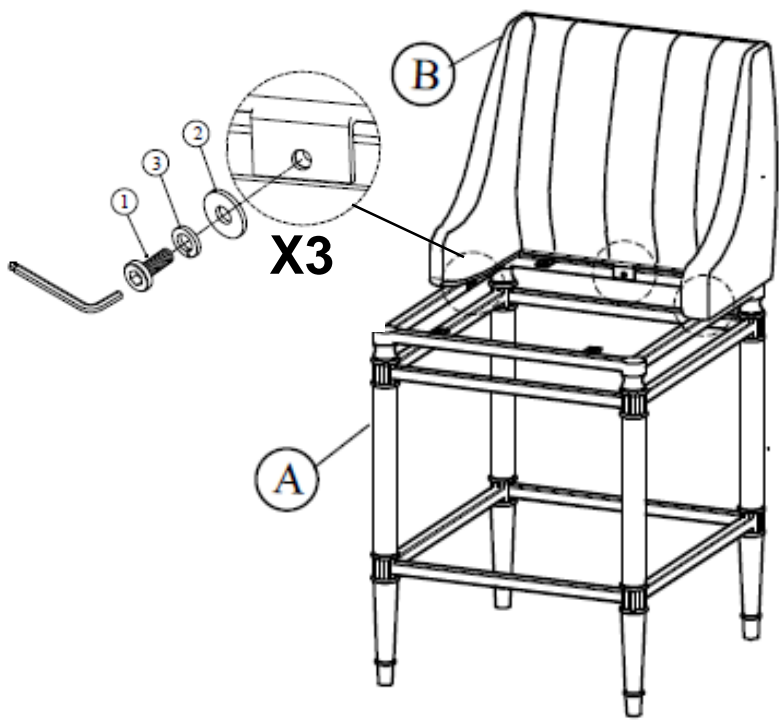

STEP 2

