

Product Assembly Instructions


Item # : LCPMSOCOBX1 / PIMENTEL CORNER SOFA - LEFT SEAT
 LCPMSOCOBX2 / PIMENTEL CORNER SOFA - CORNER SEAT
 LCPMSOCOBX3 / PIMENTEL CORNER SOFA - RIGHT SEAT
 LCPMSOKHBX1 / PIMENTEL CORNER SOFA - LEFT SEAT
 LCPMSOKHBX2 / PIMENTEL CORNER SOFA - CORNER SEAT
 LCPMSOKHBX3 / PIMENTEL CORNER SOFA - RIGHT SEAT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.


Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

* Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. *

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.

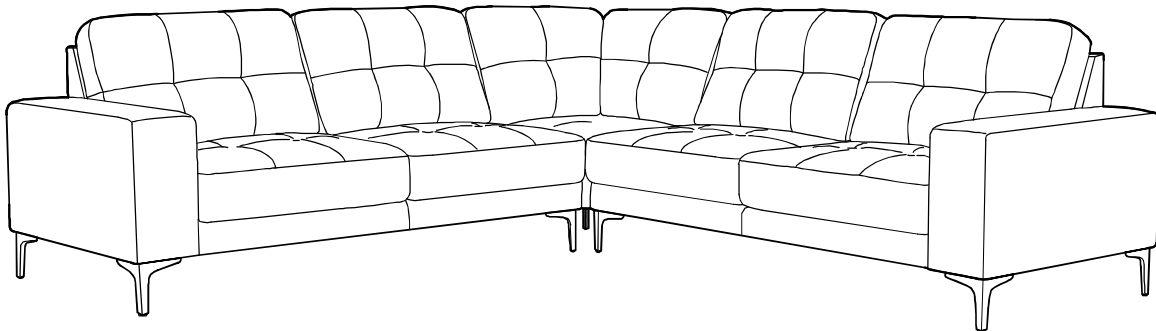

HARDWARE LIST					
NO.	COMPONENT		LEFT SEAT	CORNER SEAT	RIGHT SEAT
1	Metal Leg		4 pcs	3 pcs	4 pcs
2	JCBC Bolt M8 x 20mm		8 pcs	6 pcs	8 pcs
3	Allen Wrench		1 pc	1 pc	1 pc
4	Center Support Leg		N/A	1 pc	N/A
5	Washer		N/A	1 pc	N/A

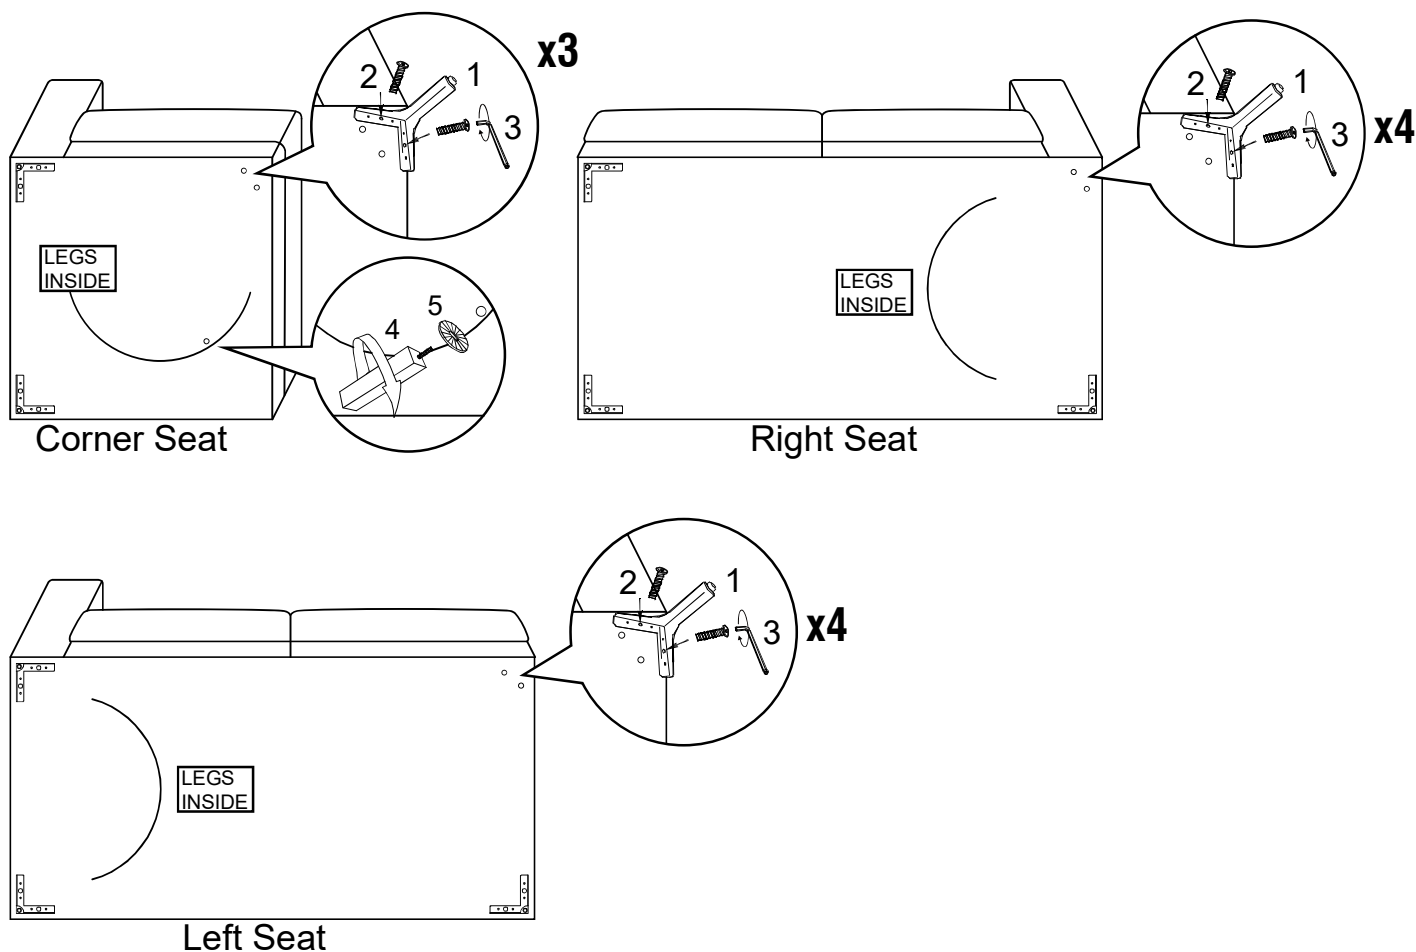

Step 1:

Place the left seat/corner seat/right seat on its back against a soft, clean surface to prevent scratches or damage.

Step 2:


The legs and hardware are packed inside the zipper. To remove them, just unzip it.

Step 3:

* Corner Seat - Attach 3 Metal legs (1) to each corner of the base using two JCBC bolts M8 x 20mm (2) per leg, tightening them with the provided Allen wrench (3). Next, install the center support leg (4) with the washer (5) as shown in the diagram. Tighten securely by turning them clockwise.


Step 4:

* Left and Right Seat - Attach four Legs (1) using two JCBC Bolt M8 x 60mm (2) onto each corner of the base with the provided Allen wrench (3). Tighten all bolts securely.

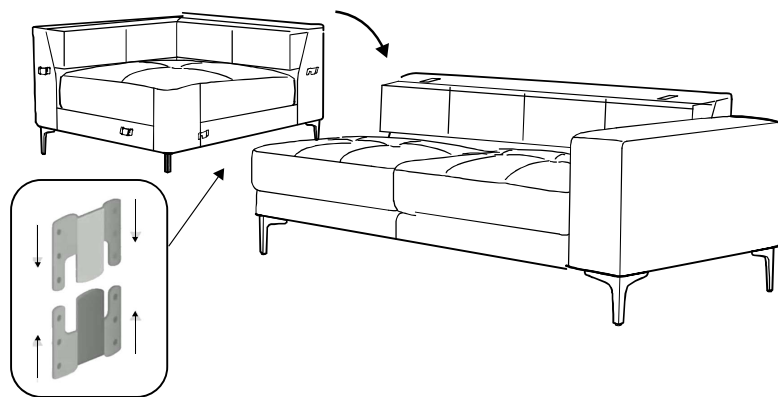


Step 5 :

Connect the corner seat to the right seat by aligning the connector brackets above each other and pushing down to secure them in place.

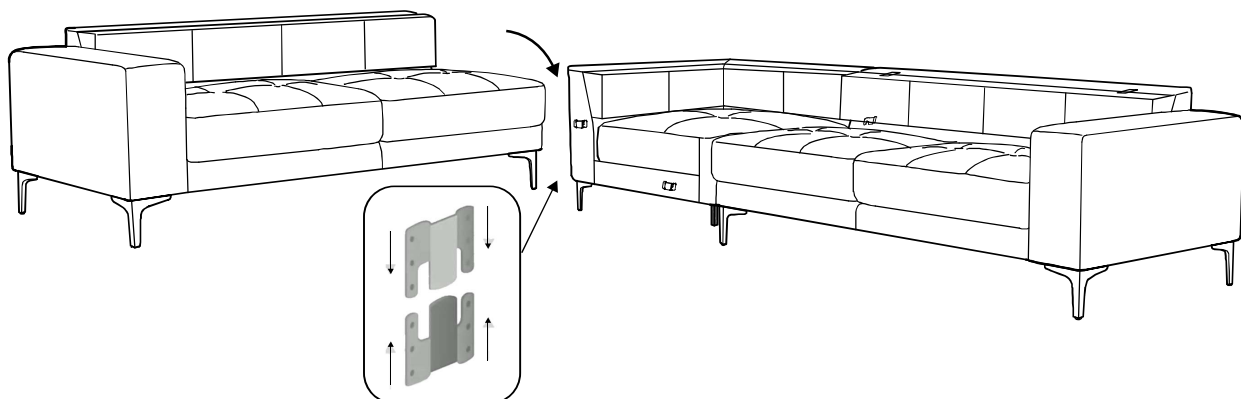

Step 6 :

Connect the left seat to the corner seat by aligning the connector brackets above each other and pushing down to secure them in place.

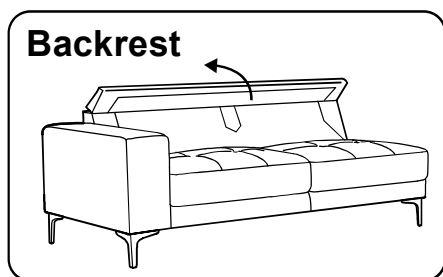

Step 7 :

Unfold the backrest, then place each seat and corner cushion into position as shown in the diagram.

