











		Instaling		Accessories			Tool	
ITEM:								
	Rococo-0119035-C							
	SEAT	FRAME			SCREW	SCREW	GASKET	ALLENKEY
Pcs	1	1	1	1	M6*16	M6*16	φ 16*1*φ7	φ5 φ4
					Size			Size
					4	4	4	1 1 1

Step:1



Step:2

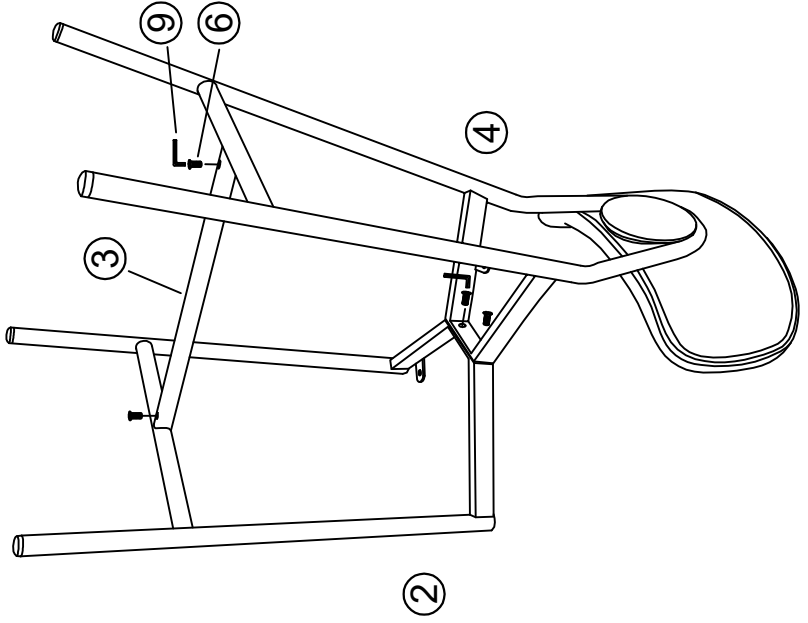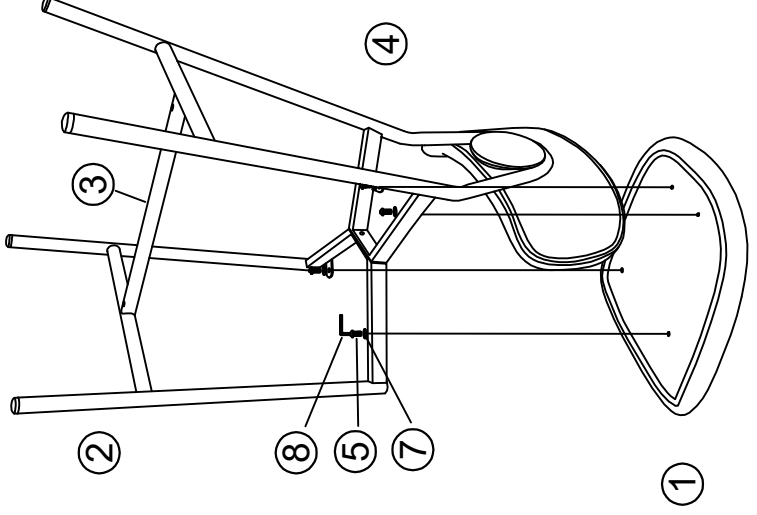

Step:3

