
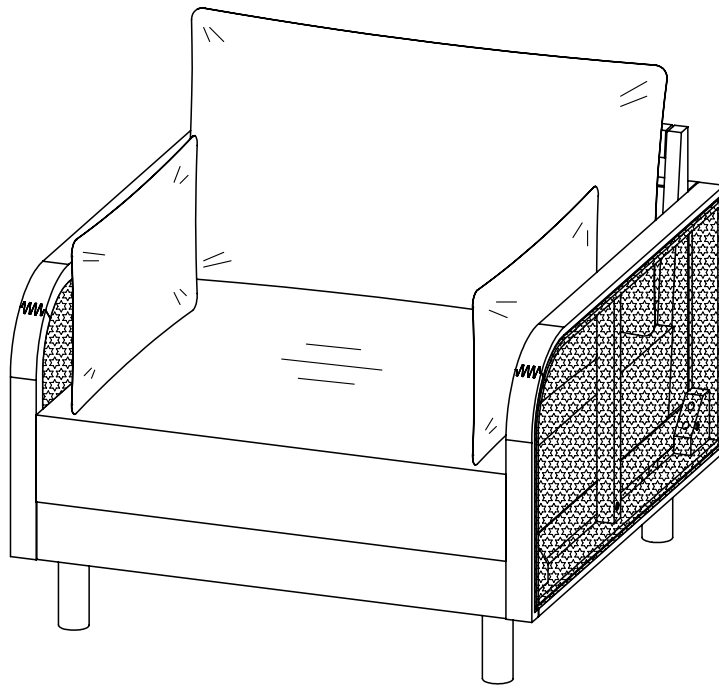




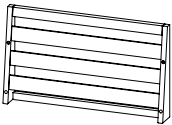

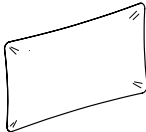





WAVEFRONT SOFA CHAIR ASSEMBLY INSTRUCTIONS




LABEL	PICTURE	DESCRIPTION	QTY
01		Left armrest	1
02		Right armrest	1
03		Seat frame	1
04		Back	1
05		Back	1
06		Leg	4
07		Seat cushion	1
08		Back cushion	1
09		Oval bolster	2

A		JCBC BOLTS M6 X 50 MM	12
B		SCREW M6 X 70 MM	4
C		ALLEN KEY M4 X100 MM	1


STEP 1

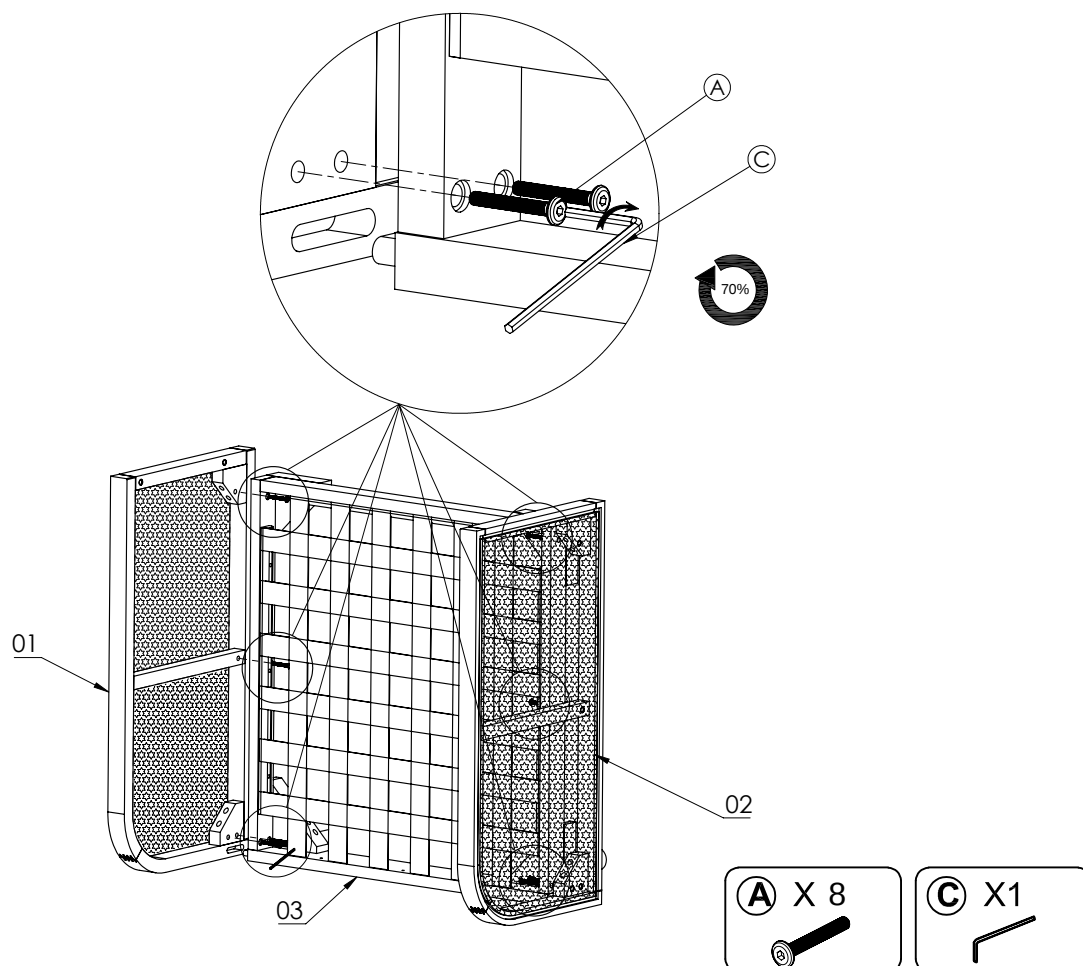

STEP 2

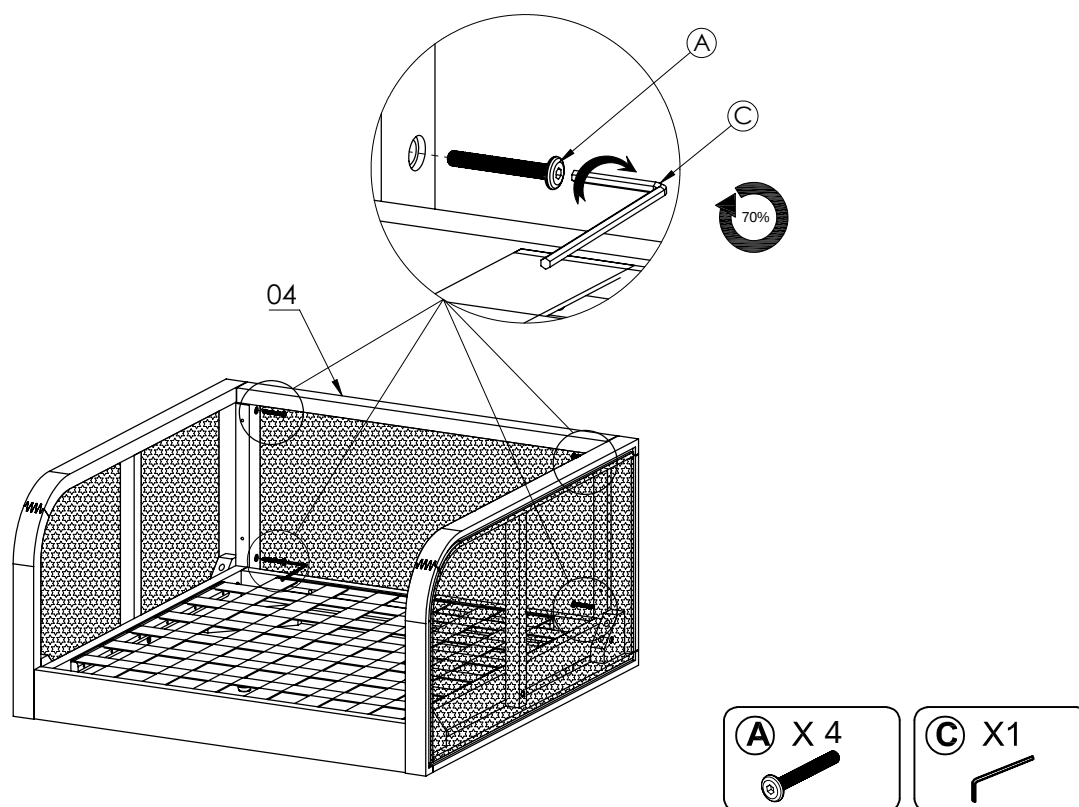


STEP 3

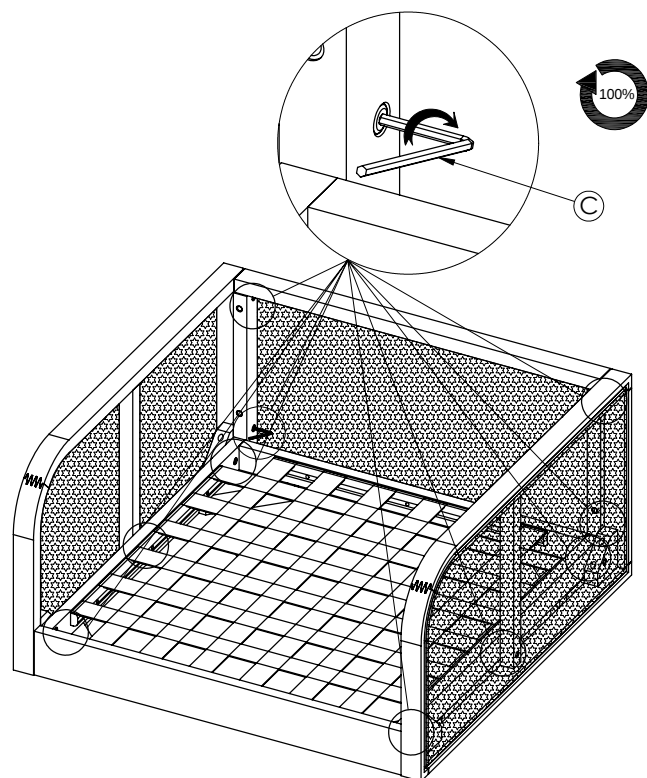

Ⓒ X1



STEP 4

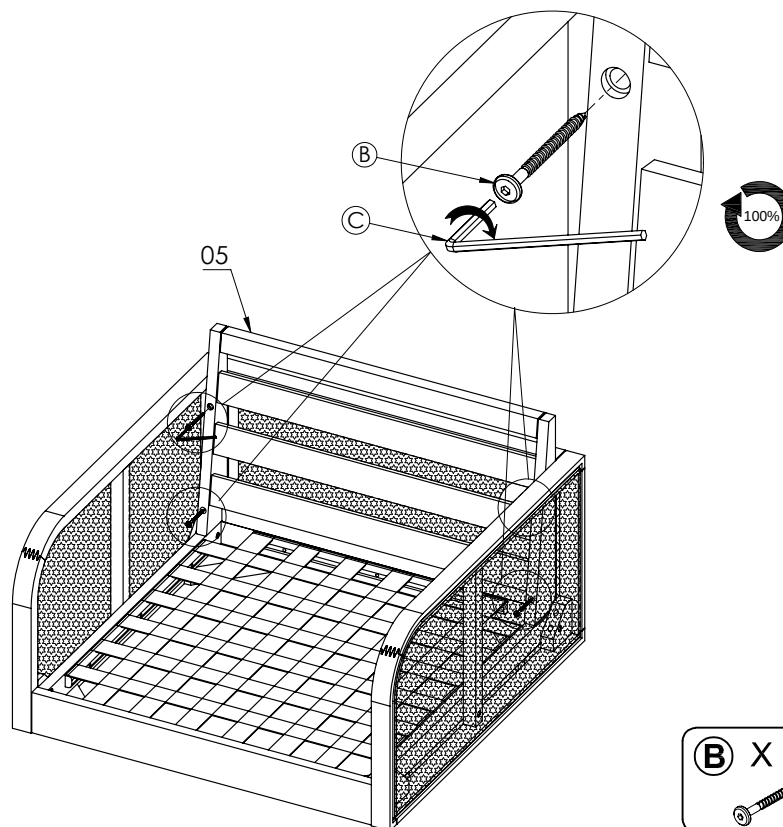


Ⓑ X 4



Ⓒ X1



STEP 5

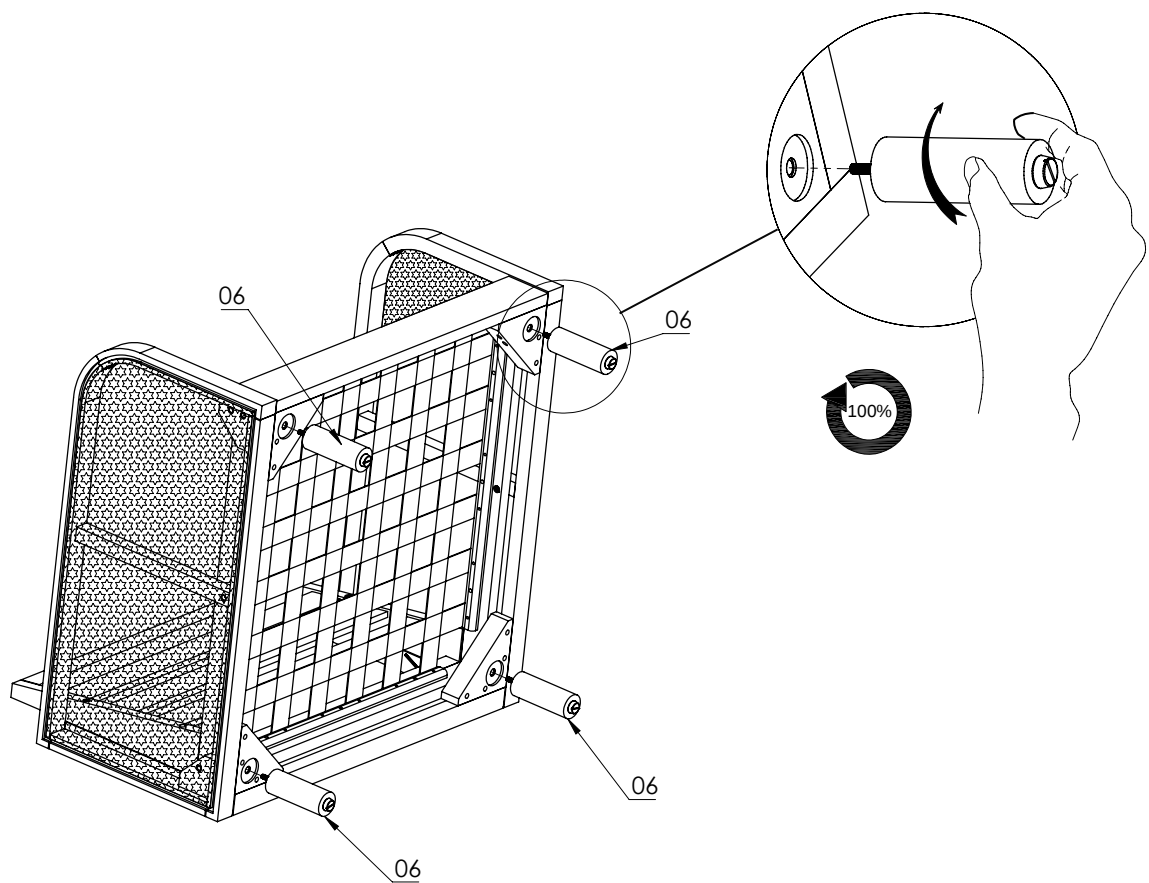

STEP 6

