
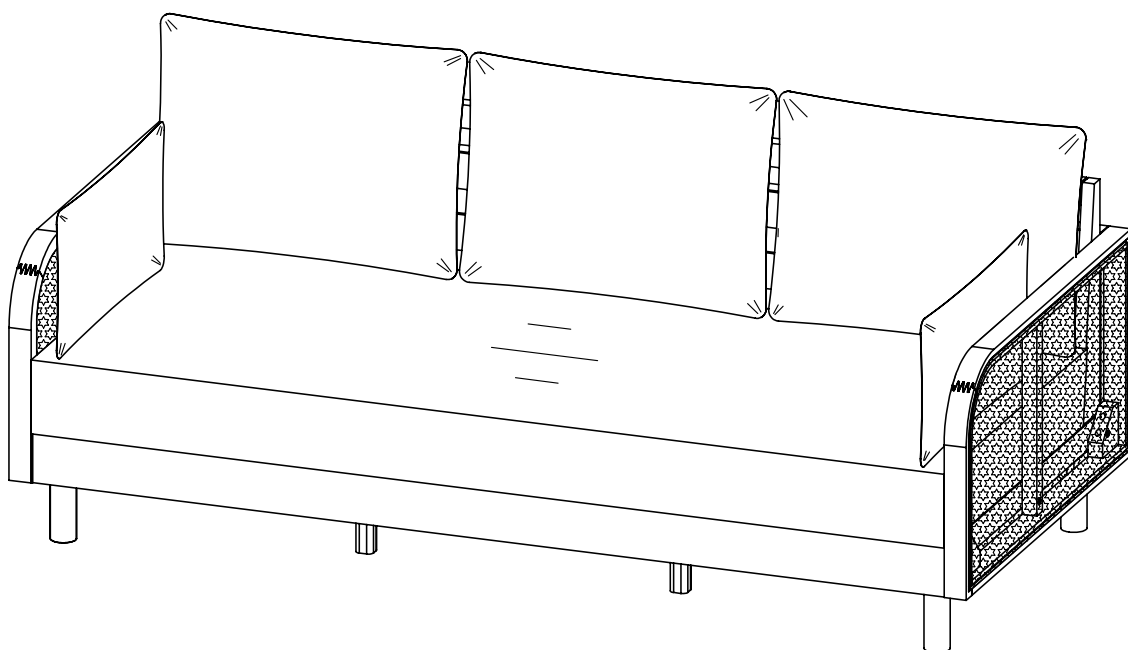


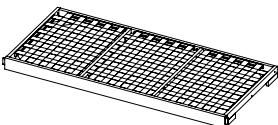
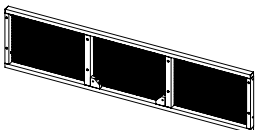
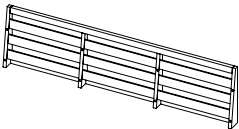

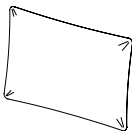


WAVEFRONT 3 SEATER SOFA



ASSEMBLY INSTRUCTIONS

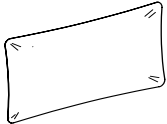


PART LIST

LABEL	PICTURE	DESCRIPTION	QTY
01		Left armrest	1
02		Right armrest	1
03		Seat frame	1
04		Back	1
05		Back	1
06		Leg	4
07		Middle leg	4
08		Seat cushion	1
09		Back cushion	3
10		Oval botster	2


HARDWARE LIST

A		JCBC BOLTS M6 X 50 MM	14
B		SCREW M6 X 70 MM	8
C		JCBC BOLTS M6 X 30 MM	8
D		ALLEN KEY M4 X100 MM	1


STEP 1

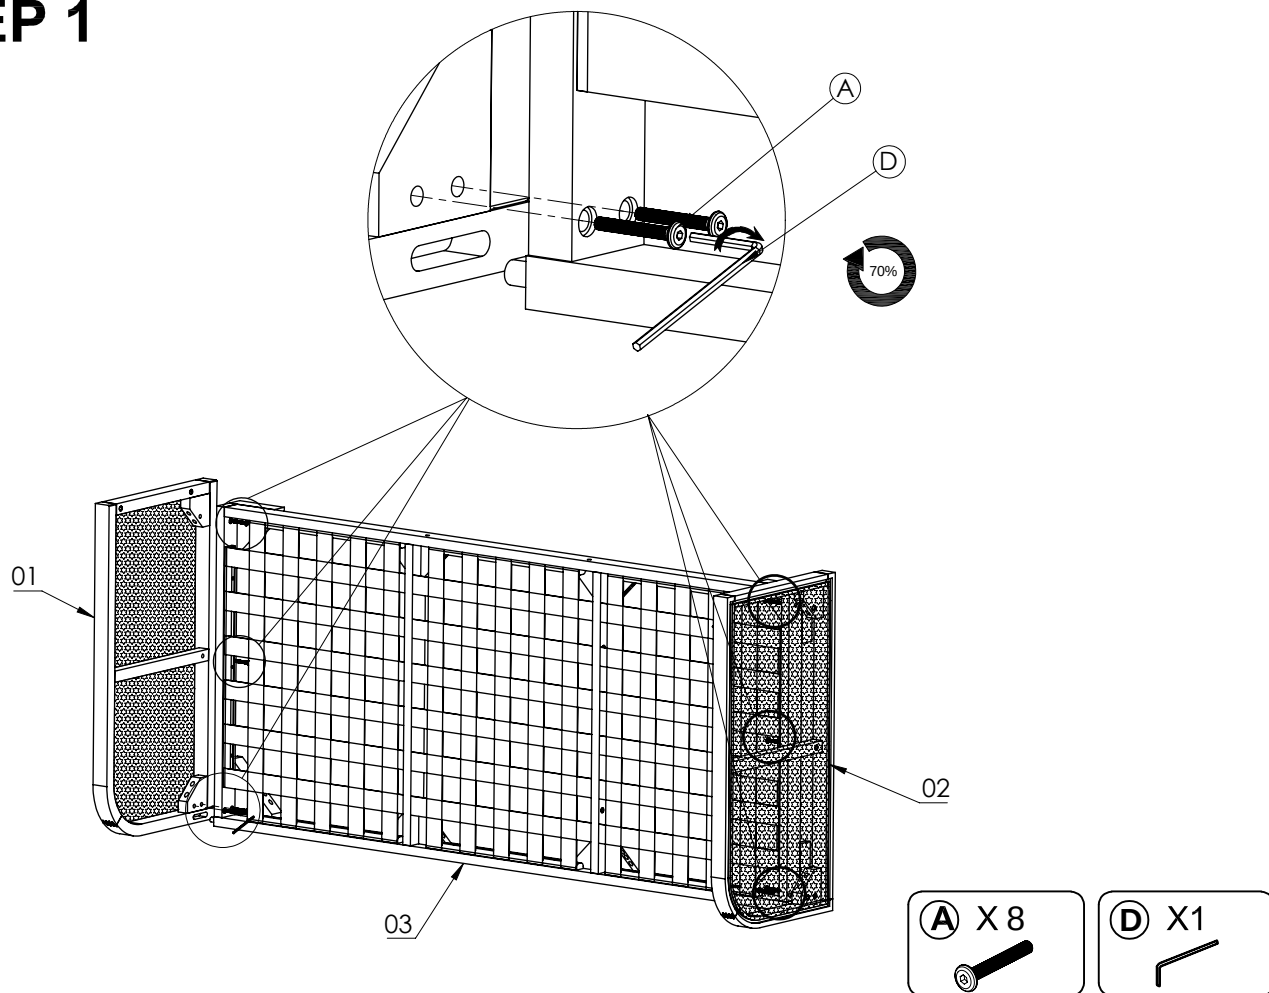

STEP 2

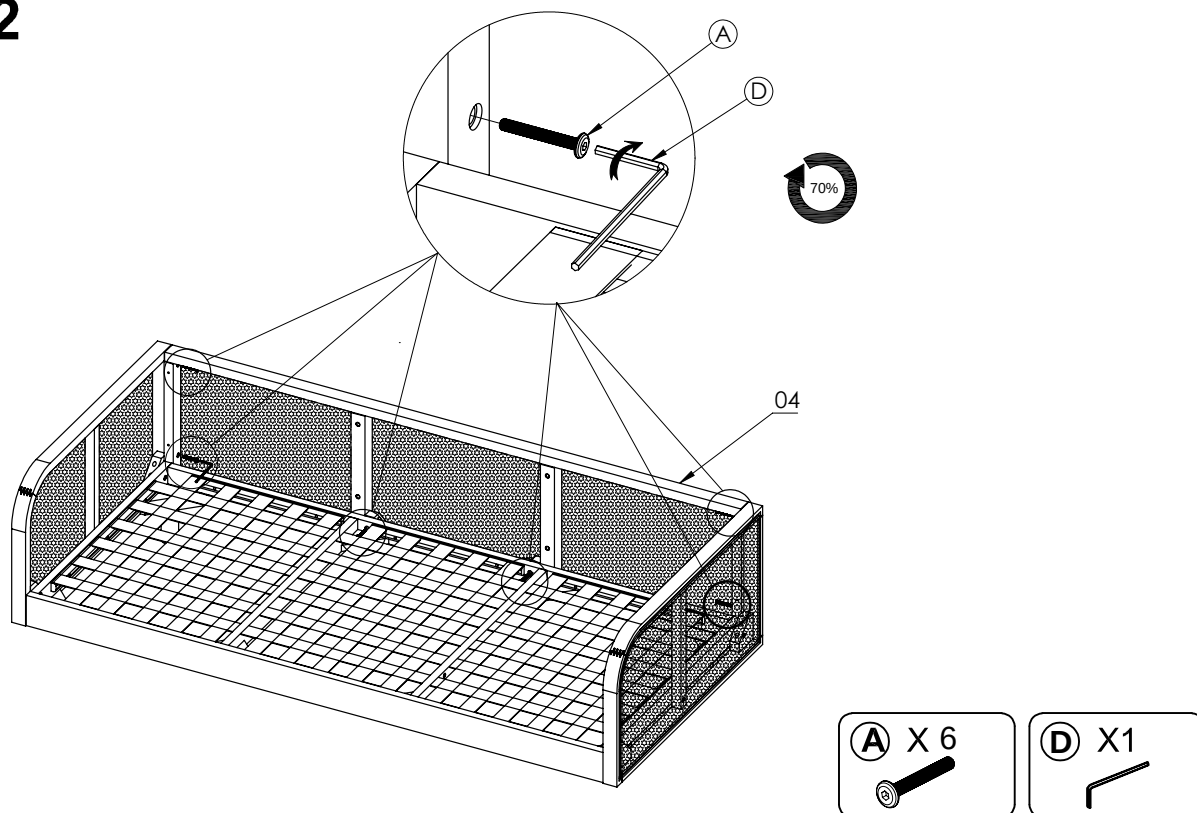


STEP 3

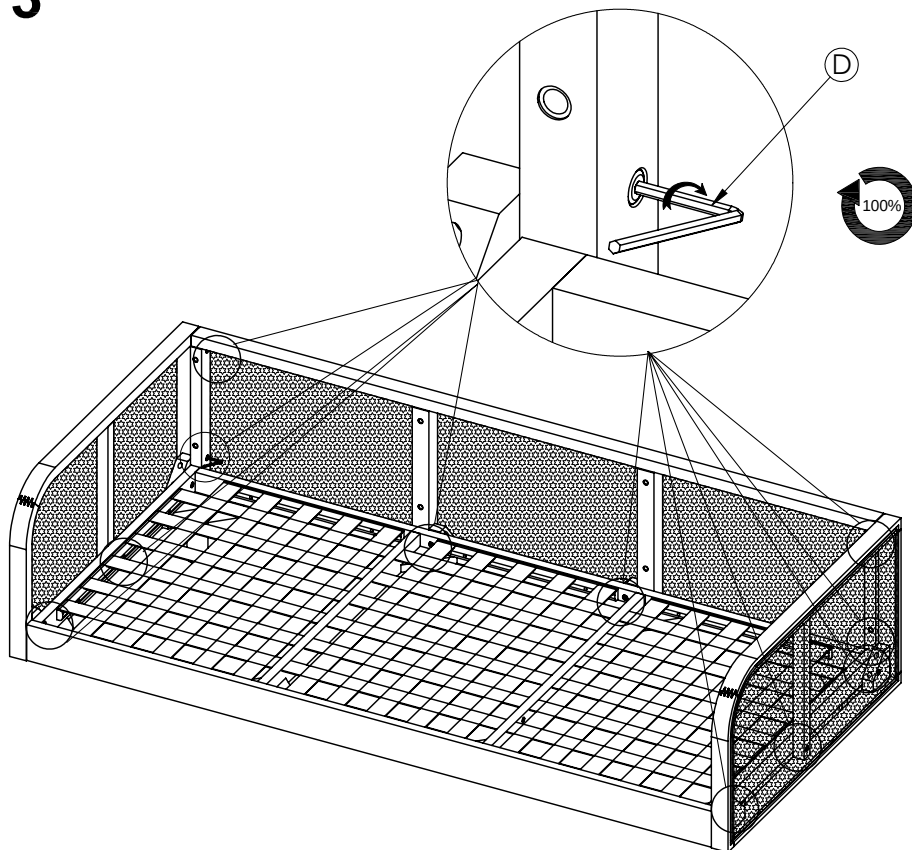

(D) X1



STEP 4

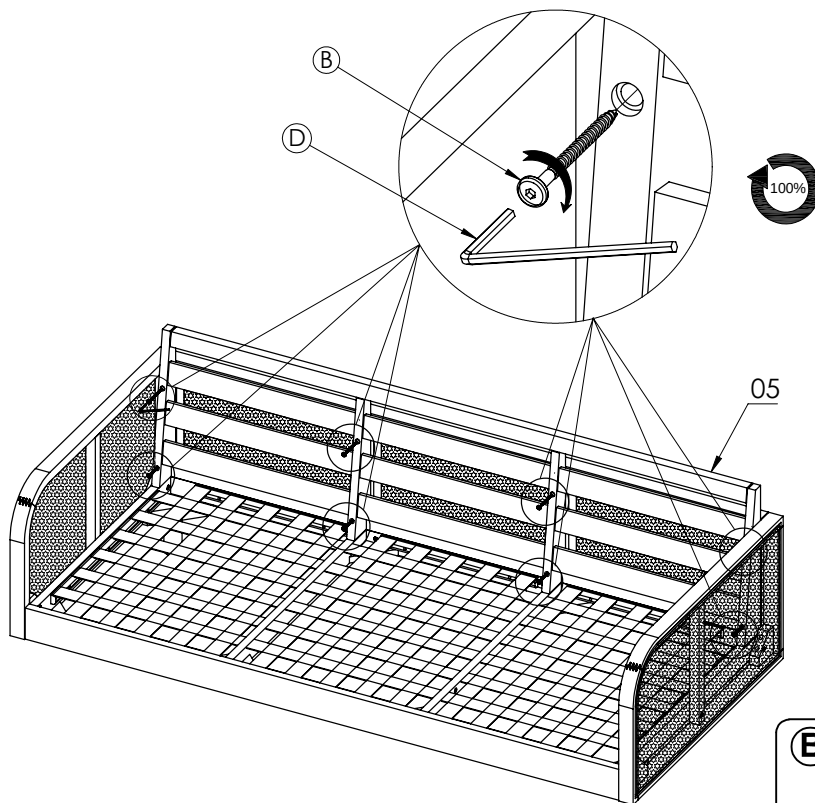


(B) X 8



(D) X1



STEP 5

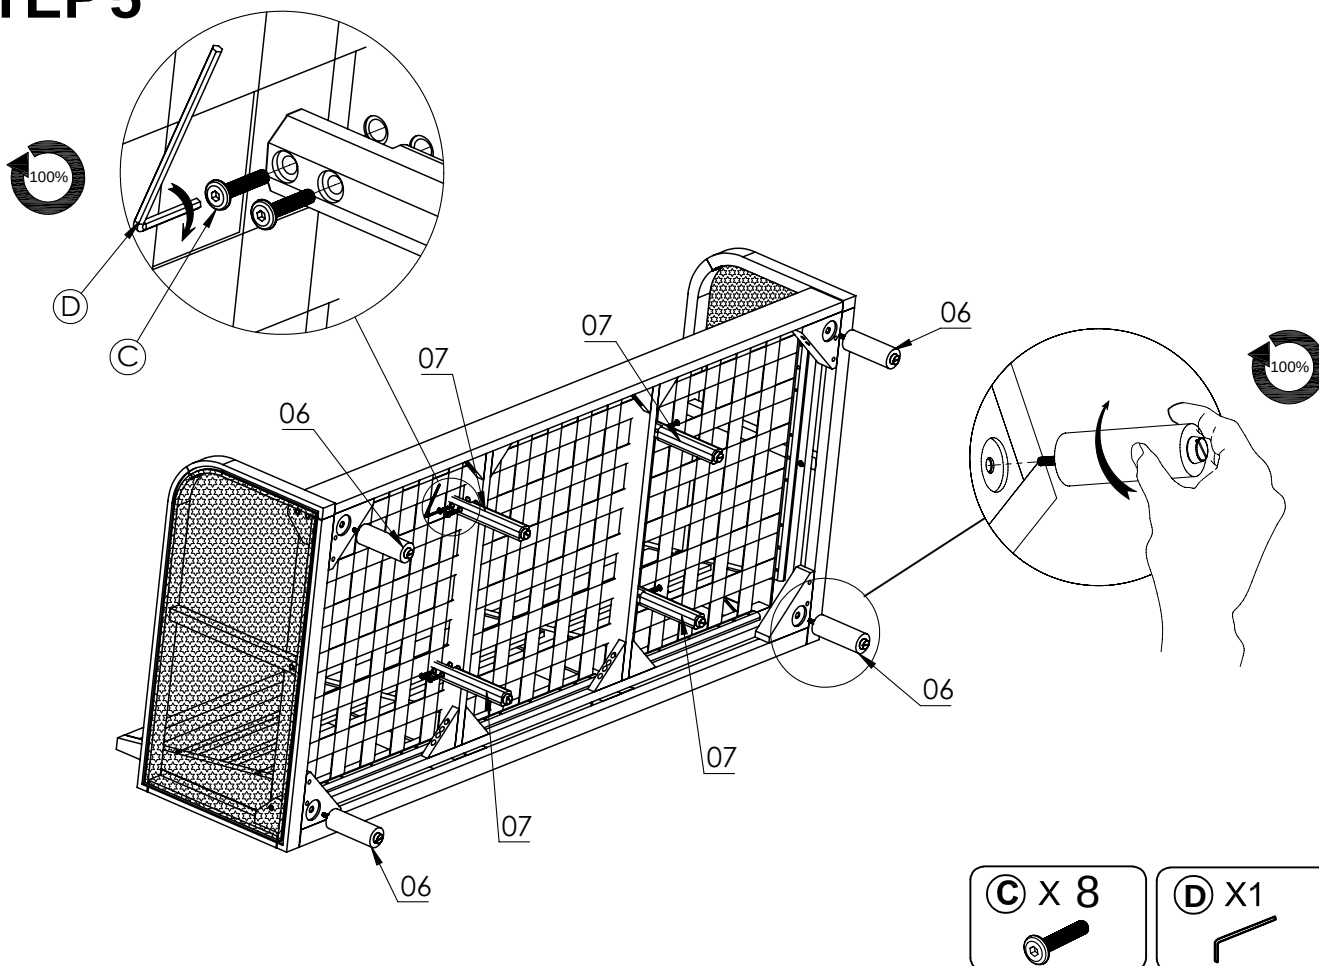

STEP 6

