


Item # : LCWRBALSSB26 / LCWRBASGSB26 Wren 26" Swivel Barstool LCWRBALSSB30 / LCWRBASGSB30 Wren 30" Swivel Barstool

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.


Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.

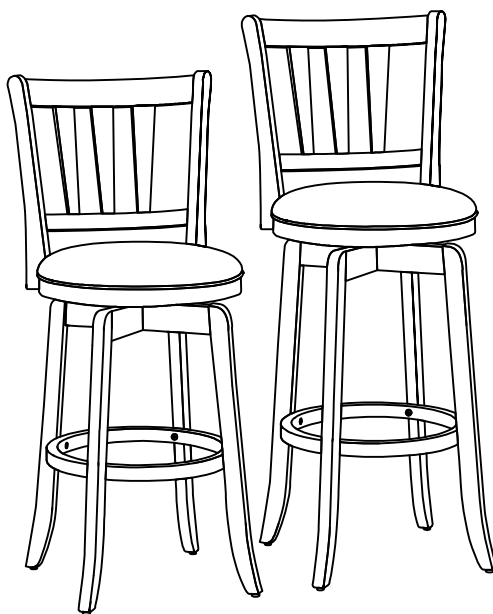


PARTS LIST			
NO.	COMPONENT		QTY.
A	Backrest		1 pc
B	Seat Frame		1 pc
C	Upper Leg		1 pc
D	Lower Leg		1 pc
E	Footrest Ring		1 pc
F	Seat Cushion		1 pc

HARDWARE LIST			
NO.	COMPONENT		QTY.
1	JCBC Bolt M6 x 45mm		14 pcs
2	Spring Washer		14 pcs
3	Flat Washer		10 pcs
4	CB Screw M4 x 32mm		4 pcs
5	Allen Wrench		1 pc


* Phillips screwdriver not included *

Step 1

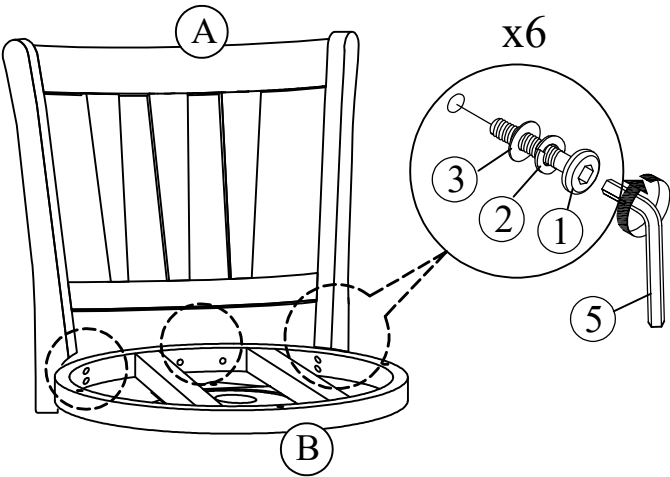


1) Attach Seat Frame (B) to the Backrest (A) using 6pcs JCBC Bolts (1) , 6pcs Spring Washers (2) and 6pcs Flat Washers (3). Secure with Allen Wrench (5). Fully tighten all the bolts.

Step 2

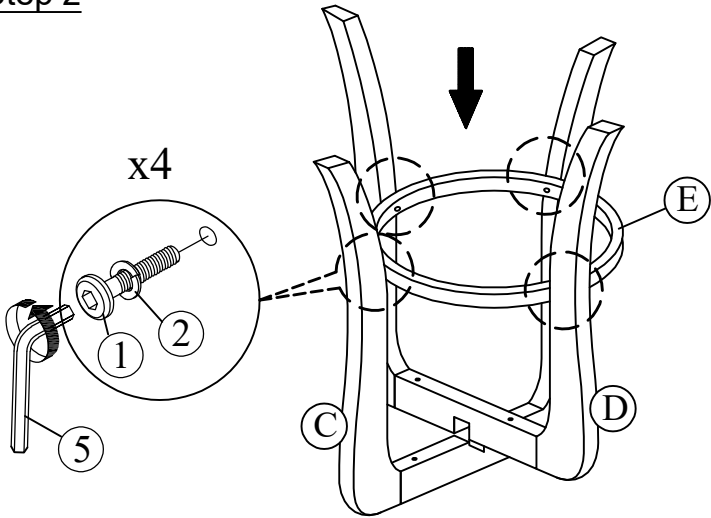


1) Insert Lower Leg (D) across Upper Leg (C). Attach Footrest Ring (E) to the legs using 4pcs JCBC bolts (1) and 4pcs Spring Washers (2). Secure with Allen Wrench (5). Fully tighten all bolts.

Step 3

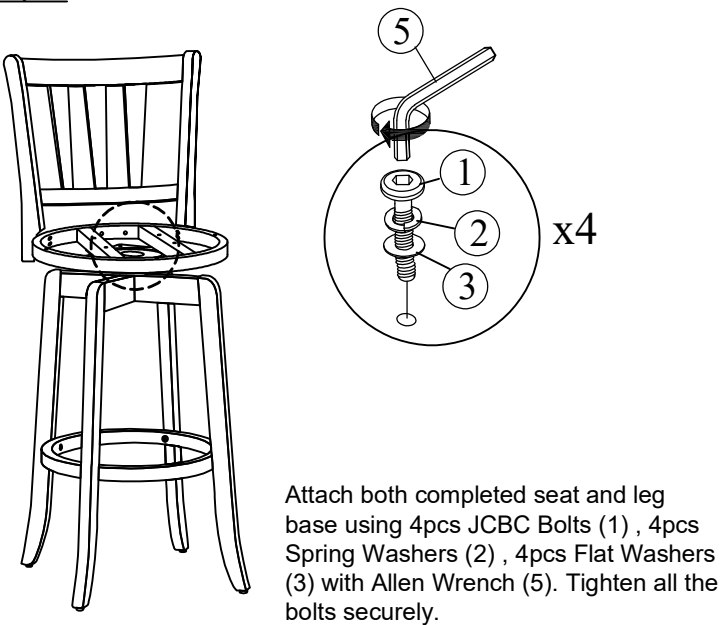

Attach both completed seat and leg base using 4pcs JCBC Bolts (1) , 4pcs Spring Washers (2) , 4pcs Flat Washers (3) with Allen Wrench (5). Tighten all the bolts securely.

Step 4

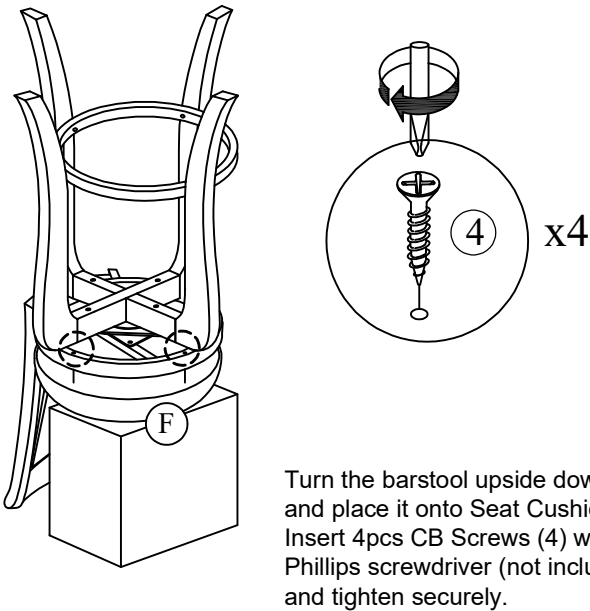

Turn the barstool upside down and place it onto Seat Cushion (F). Insert 4pcs CB Screws (4) with Phillips screwdriver (not included) and tighten securely.

